




Warning

These are only brief instructions! Please read and comply with these instructions prior to using or servicing your appliance.

The non-compliance of the operating and safety instructions may lead to damages of the appliance and to dangers for the operator and other persons.


Start up

1

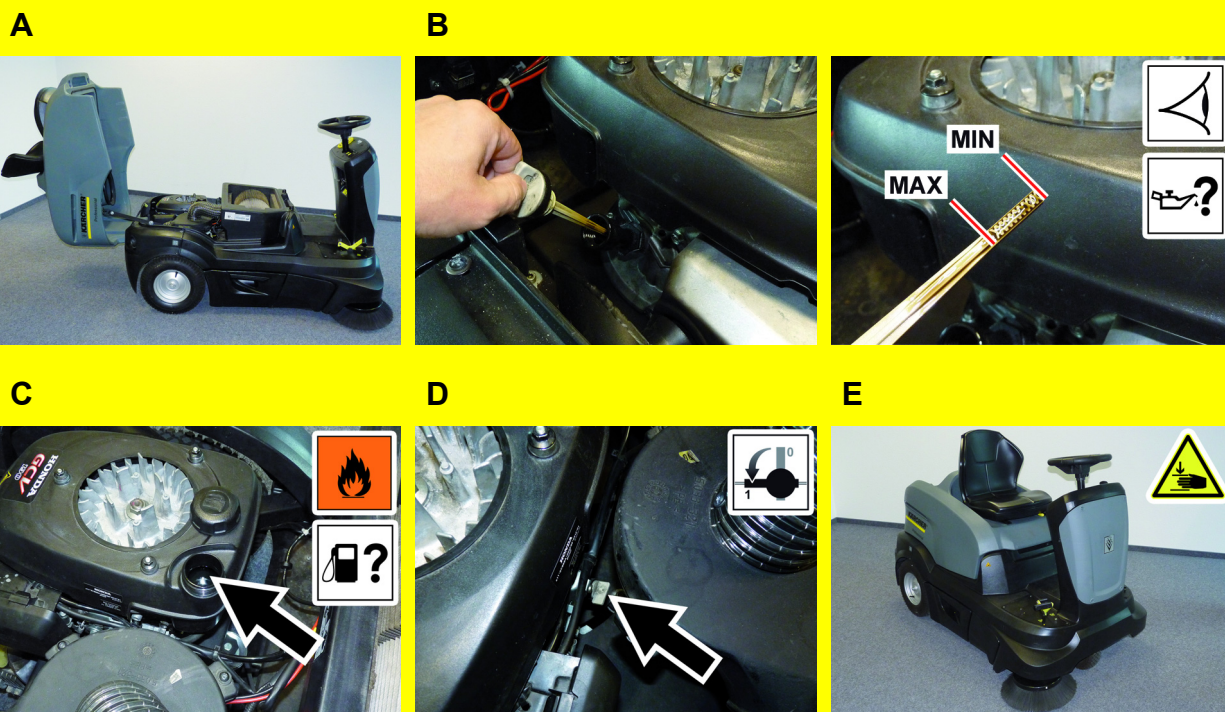

- A Open the device hood.
- B Check oil level
- C Check fill level of fuel tank.
Use "regular unleaded petrol".
- D Open the fuel supply.
Turn the rotating knob parallel to the hose of the fuel tap.
- E Close cover.


2

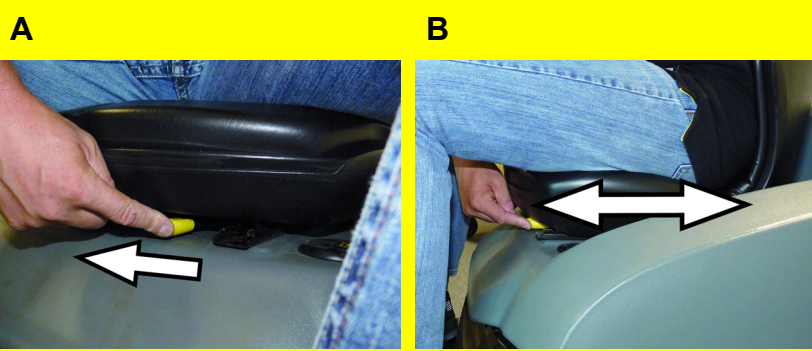

- A Pull seat adjustment lever inwards.
- B Slide seat, release lever and lock in place.
Check that the seat is properly locked in position by attempting to move it backwards and forwards.

Operation

1

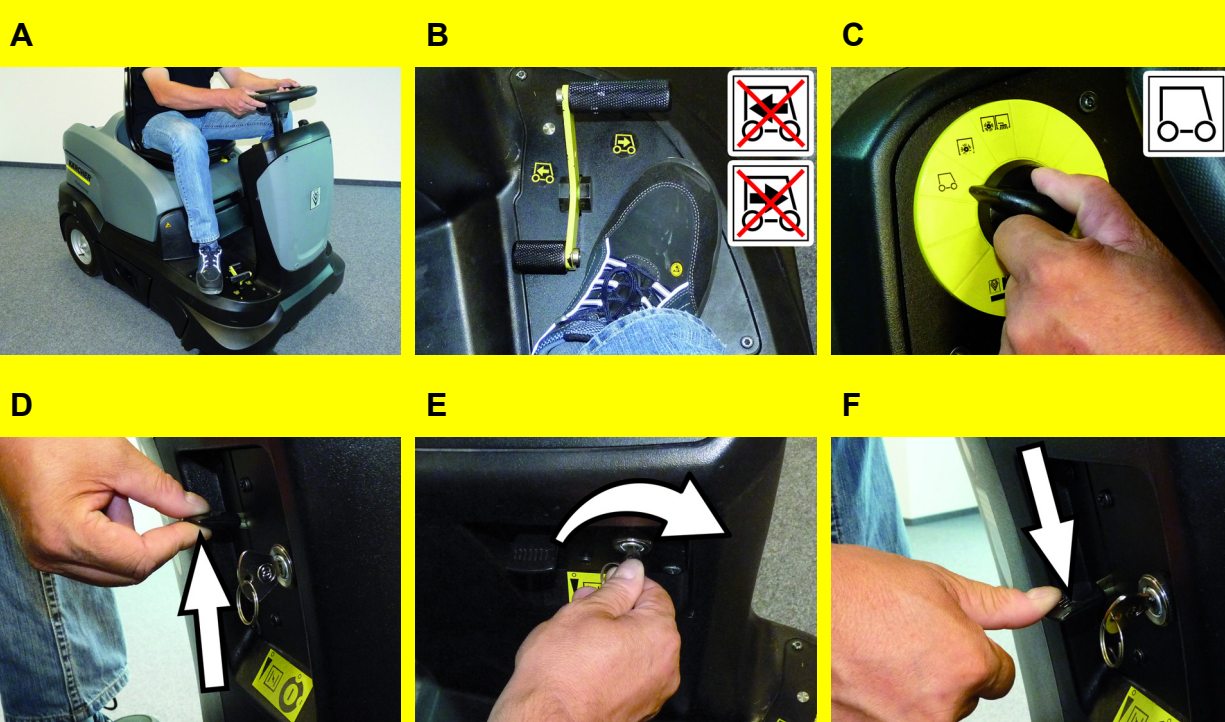

- ### Starting the machine
- A Sit on the driver's seat.
 - B Do NOT press the accelerator pedal.
 - C Set programme switch to step 1 (driving).
 - D During cold or wet weather, pull the choke lever upwards.
 - E Turn ignition key past position 1.
If the machine starts, release the ignition key.
 - F Press choke lever back down.

Operation

2



Drive the machine

- A Press slowly the accelerator pedal "forward".
- B Press slowly the accelerator pedal "reverse".
- C Release the accelerator pedal, the machine brakes automatically and stops.

3



Sweeping with sweep roller

- A Set programme switch to step 2. Roller brush is lowered.

4



Sweeping using roller brush and side brushes

- A Set programme switch to step 3. Side brushes and roller brush are lowered.

5



Sweeping up coarse dirt (lift the coarse dirt door)

- A Press the left pedal for the bulk waste flap forwards and keep pressed down. To lower it, take foot off pedal.

6



Sweeping damp or wet floors

- A Open wet/dry flap.

7



Cleaning the dust filter

- A During operations, the dust filter should be shaken and cleaned every 15-30 minutes depending on the amount of collected dust.

8




Empty both sides of the waste container.

- A Raise the waste container slightly and pull it out. Empty waste container. Push in the waste container and lock it.

Finish operation


1

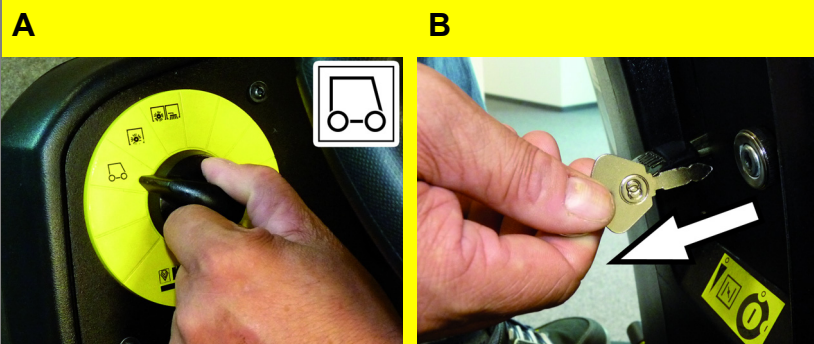

Turn off the appliance

- A Set programme switch to step 1 (driving).
The side brush and roller brush are raised.
- B Turn ignition key to "0" and remove it.

2

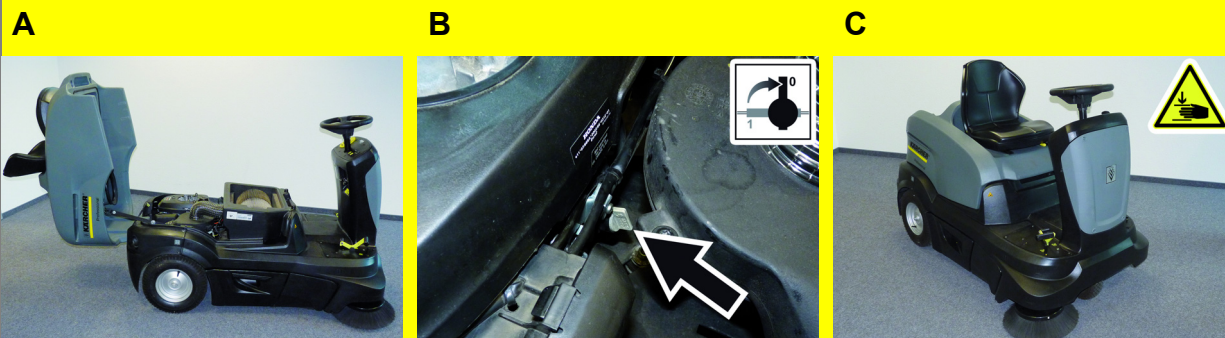

Close fuel cock

- A Open the device hood.
- B Close the fuel supply.
Turn the rotating knob perpendicular to the fuel tap.
- C Close cover.


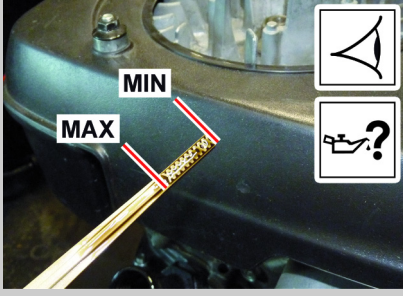

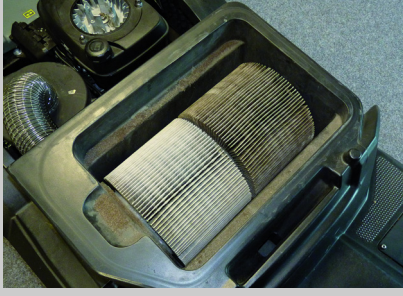

3



Empty both sides of the waste container.

- A Raise the waste container slightly and pull it out.
Empty waste container.
Push in the waste container and lock it.

Maintenance and care

			daily	weekly	Kärcher Customer Service
1	A				
					
2	A				
	B				
3	A				


A Check engine oil level.

A Check air filter.
B Check dust filter and clean filter box, if required.

A Clean the machine with a damp cloth which has been soaked in mild detergent.
 ⚠ **Warning**
Risk of damage! Do not wash down the appliance with water and do not use aggressive detergents.

Troubleshooting


1

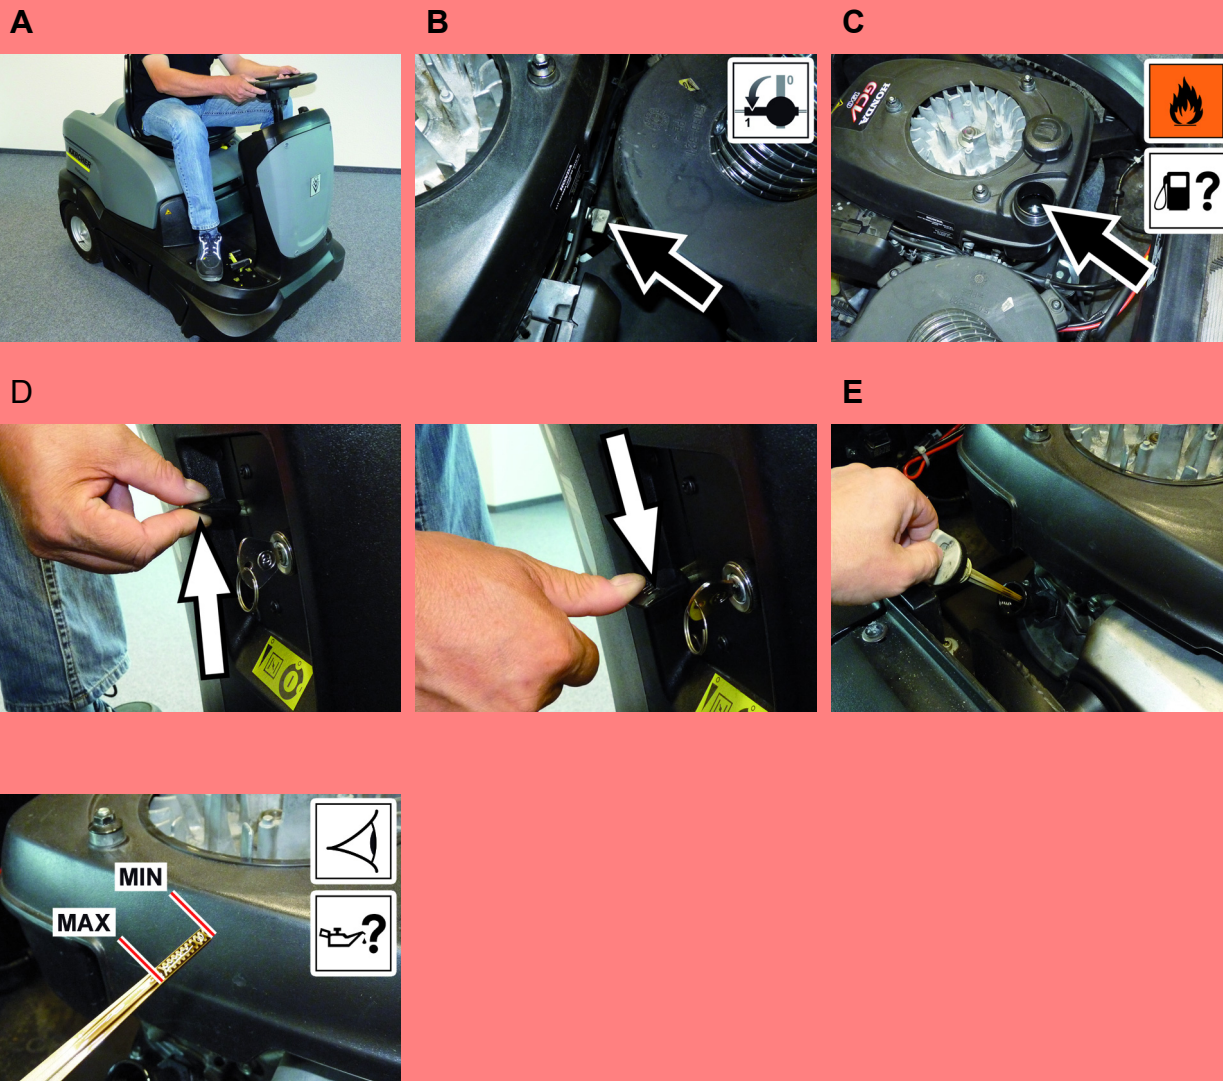

Appliance cannot be started

- A Sit on the driver seat, the seat contact switch gets activated
- B Open fuel cock
- C Refuel
- D In cold or wet weather: Pull choke lever upwards. Once the engine is running, press! choke lever down again.
- E Check engine oil level.


2

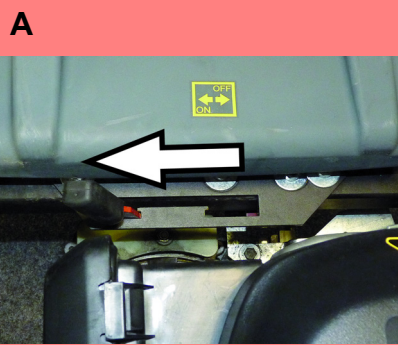

Engine is running but machine is not moving

- A Check setting of freewheel lever

3

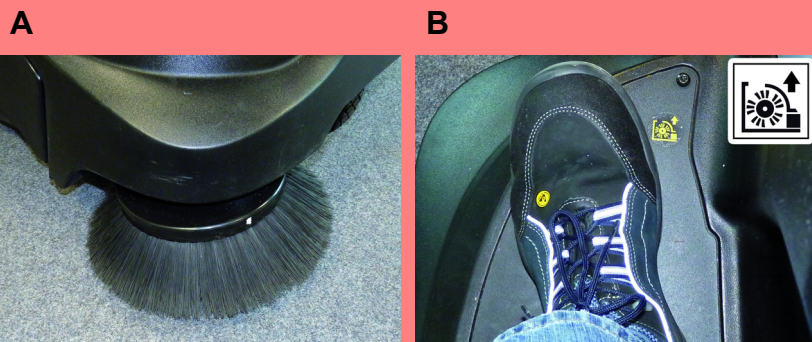

Machine is not sweeping properly

- A Check roller brush and side brushes for wear, replace if necessary.
- B Check function of bulk waste flap
- C Check the rubber skirts for wear and tear.

4



Dust gathers in the machine

- A Empty waste container
- B Check dust filter, clean or replace
- C Close wet/dry flap
- D Check the rubber skirts for wear and tear.

5



Roller brush does not turn.

- A Remove belts or cords from roller brush