

Descaling powder RM 511

Effectively descales steam cleaners and other hot-water devices, such as kettles and coffee machines – for long lifetimes and low energy use.







Application areas

Descaler for Kärcher steam cleaners Descaler for coffee machines, kettles etc.

Technical data			
Container sizes	Packaging unit	Part number	
3 × 17 g		6.295-982.0	
6 × 17 g	15 Piece(s)	6.295-987.0	
6 × 17 g	15 Piece(s)	6.296-193.0	

KARCHER

Application

Steam cleaners and other household devices

- One packet of powder is added to a container (e.g. a measuring cup) and stirred into 0.5 litres of cold water until it dissolves.
- Pour the descaler into the device (e.g. steam cleaner, kettle).
- Rinse the device at least twice after the descaling process.
- After this, you can use the device as normal.



Warnings and safety recommendations according to EC Directives

- Warning
- H319 Causes serious eye irritation
- H335 May cause respiratory irritation
- P101 If medical advice is needed, have product container or label at hand.
- P102 Keep out of reach of children.
- P261 Avoid breathing dust/fume/gas/mist/vapours/spray.
- P280i Wear eye/face protection.
- P304 + P340 IF INHALED: Remove person to fresh air and keep comfortable for breathing.
- P305 + P351 + P338 IF IN EYES: Rinse cautiously with water for several minutes. Remove contact lenses, if present and easy to do. Continue rinsing.
 P 105 Stars lealed up
- P405 Store locked up.
- P501a Dispose of contents/container in accordance with local/regional/national/international regulations.