

Wood cleaner RM 624

For the thorough cleaning of all treated and untreated water-resistant wooden surfaces such as garden furniture, wooden floors and decking. Very gentle on materials.



Properties

- For cleaning all sensitive water-resistant wooden surfaces, can be used universally
- Dissolves oil/grease and mineral stains
- Removes algae, soot and mineral-based residues
- Quick and efficient cleaning in combination with a Kärcher high-pressure cleaner
- Extremely gentle on materials
- pH value in concentrate approx. 9
- Ready-to-use detergent (RTU)
- Can also be used manually
- Tailored to Kärcher devices with guaranteed material compatibility
- Made in Germany

Usage options

- High-pressure cleaners
- Manual

Application areas

Wooden floors
Terrace
Garden/terrace/balcony furniture

Technical data

Container sizes	Packaging unit	Part number
3 l	1 Piece(s)	6.296-147.0
5 l	1 Piece(s)	6.295-361.0

Application

With pressure washer or manually

- Dispense using the pressure washer or mix (1:10) in a bucket and apply using a sponge. Let it work in for a short while, then rinse well.

