

Buttons robot



On/Off

Press for start or pause
Press (5 sec) for turn on/off
Press together with Home (5 sec) for WLAN connection

Home

Press to send robot to station
Press together with On/Off (5 sec) for WLAN connection

Switch mode

Press to switch cleaning mode: dry cleaning or wet & dry cleaning



Lights robot

Device boot/ Firmware update

LED On/Off & Home: white breathing
LED stripe: white breathing

Network connection

LED On/Off & Home: blue breathing
LED stripe: off

Robot standby

LED On/Off & Home: off
LED stripe: off

Robot charging

LED On/Off & Home: green breathing
LED stripe: off

Robot cleaning

LED On/Off & Home: yellow (dry cleaning)
or blue (wet & dry cleaning)
LED stripe: yellow (dry cleaning)
or blue (wet & dry cleaning)

Error

LED On/Off & Home: red blinking
LED stripe: red blinking

Kärcher Indoor Robots App



Scan for details



www.kaercher.com/int/home-garden/robot-vacuums-and-mops.html

Operating Instructions



KÄRCHER

RVF 7 COMFORT QUICKSTART GUIDE



Buttons station



On/Off

Press for start

Switch mode

Press to switch cleaning mode of robot:
dry cleaning or wet & dry cleaning

Self-cleaning

Press to activate self cleaning of robot



Lights station

Station standby

All lights off

Device charging

LED stripe: green breathing

Robot cleaning

LED stripe: white


Self cleaning activated

LED stripe: blue breathing (wet & dry mode)
yellow breathing (dry mode)


Error

LED stripe: red blinking
LED tanks: red (depending on tank error)


Install device

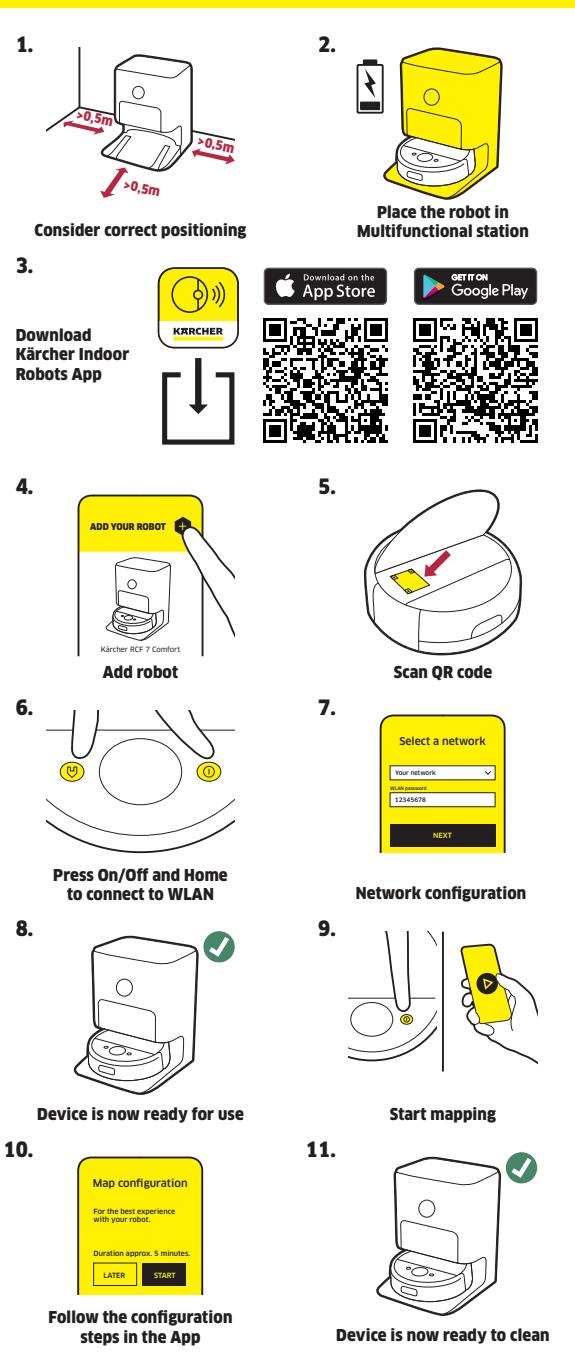


Start cleaning

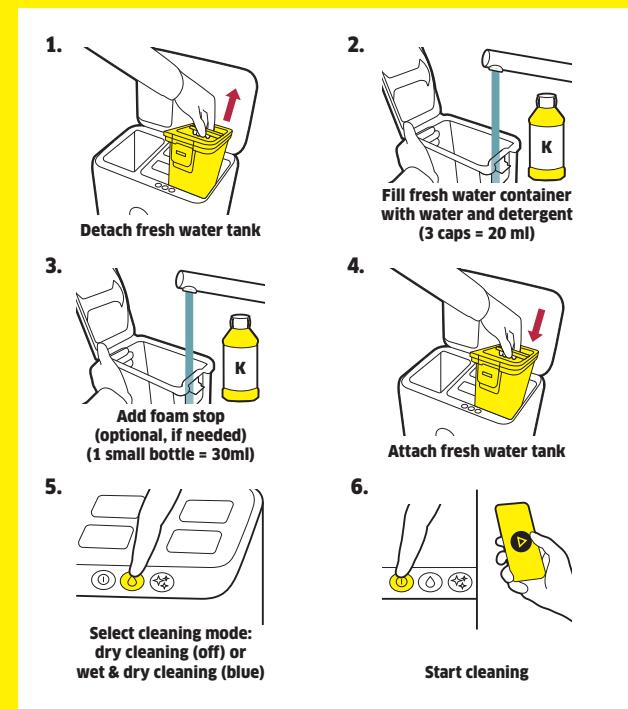

Cleaning of station

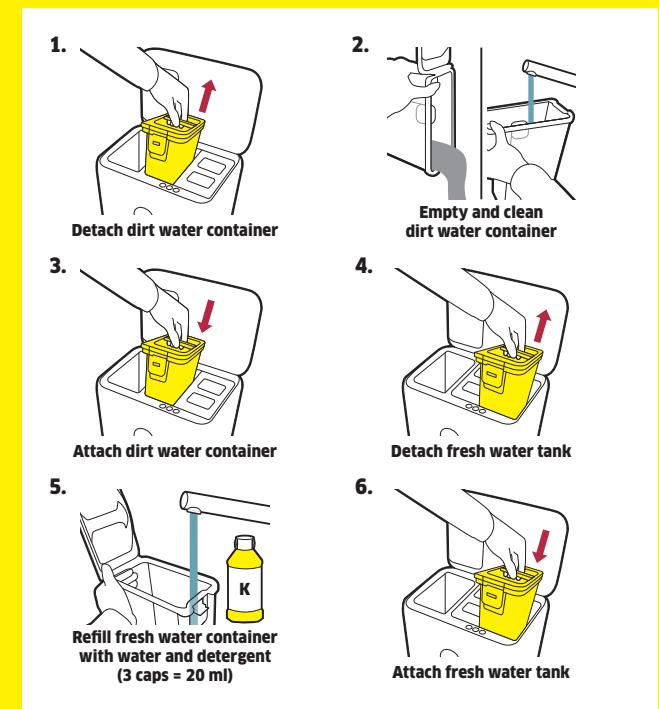

Cleaning of robot

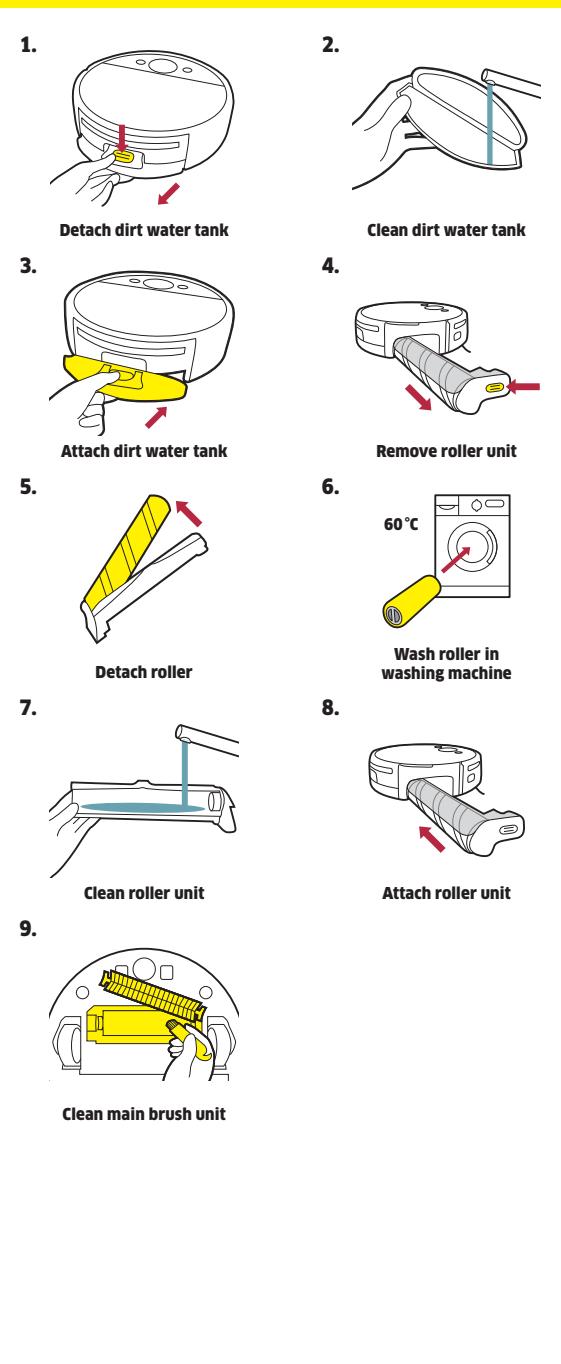

Changing of filter (optional, when needed)

