




Buttons

	On/Off	Press for start or pause Press (5 sec) for turn on/off Press together with Home (5 sec) for WLAN connection
	Home	Press to send robot to station Press together with On/Off (5 sec) for WLAN connection
	Switch mode	Press to switch cleaning mode: dry cleaning or wet & dry cleaning

Lights

Device boot/ Firmware update	LED On/Off & Home: white breathing LED stripe: white breathing
Network connection	LED On/Off & Home: blue breathing LED stripe: off
Robot standby	LED On/Off & Home: off LED stripe: off
Robot charging	LED On/Off & Home: green breathing LED stripe: off
Robot cleaning	LED On/Off & Home: yellow (dry cleaning) or blue (wet & dry cleaning) LED stripe: yellow (dry cleaning) or blue (wet & dry cleaning)
Error	LED On/Off & Home: red blinking LED stripe: red blinking

Kärcher Indoor Robots App



Scan for details



www.kaercher.com/int/home-garden/robot-vacuums-and-mops.html

Operating Instructions



RVF 7
QUICKSTART
GUIDE



Install device

Start cleaning

Cleaning of device



1. Consider correct positioning
2. Place the robot in charging station
3. Download Kärcher Indoor Robots App
4. Add robot
5. Scan QR code
6. Press On/Off and Home to connect to WLAN
7. Network configuration
8. Device is now ready for use
9. Start mapping
10. Follow the configuration steps in the App
11. Device is now ready to clean

Dry cleaning

1. Select cleaning mode
2. Start cleaning

Wet and dry cleaning

1. Select cleaning mode
2. Detach fresh water tank
3. Fill fresh water container with water and detergent (5 caps = 10ml)
4. Add FoamStop (optional, if needed) (2 caps = 4ml)
5. Attach fresh water tank
6. Start cleaning

1. Detach dirt water tank
2. Empty and clean dirt water tank
3. Attach dirt water tank
4. Detach dry dirt box
5. Empty dry dirt box
6. Attach dry dirt box
7. Remove roller unit
8. Detach roller
9. Wash roller in washing machine
10. Clean roller unit
11. Attach roller unit
12. Clean main brush unit