




### Warning

These are only brief instructions! Please read and comply with these instructions prior to using or servicing your appliance.

The non-compliance of the operating and safety instructions may lead to damages of the appliance and to dangers for the operator and other persons.


## Start up

# 1

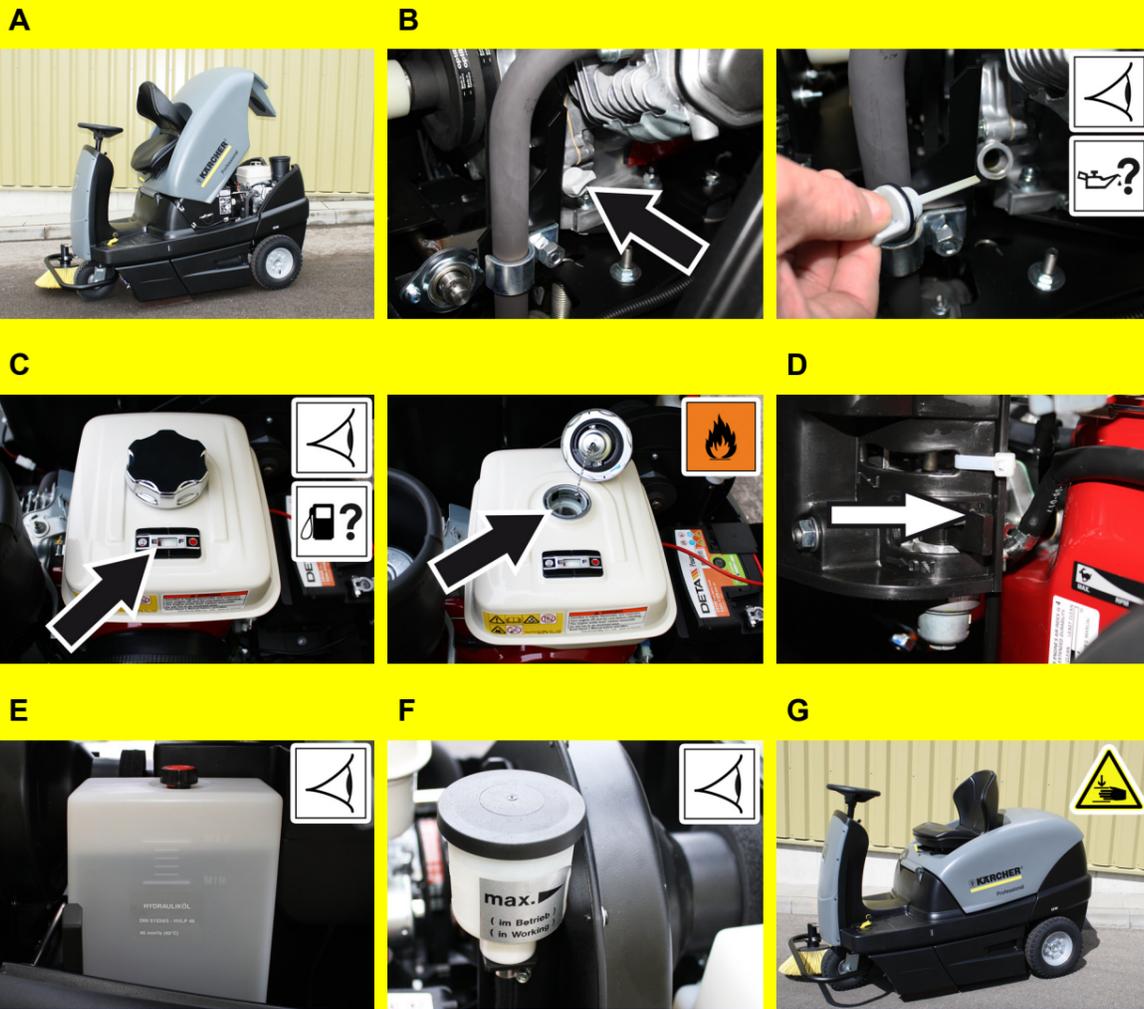

- A Opening and securing cover
- B Check oil level
- C Check fuel level via the tank indicator. Use "regular unleaded petrol".
- D Open the fuel supply.
- E Check oil level in the equalisation container.
- F Check the hydraulic oil level on the storage container.
- G Close cover.

# 2

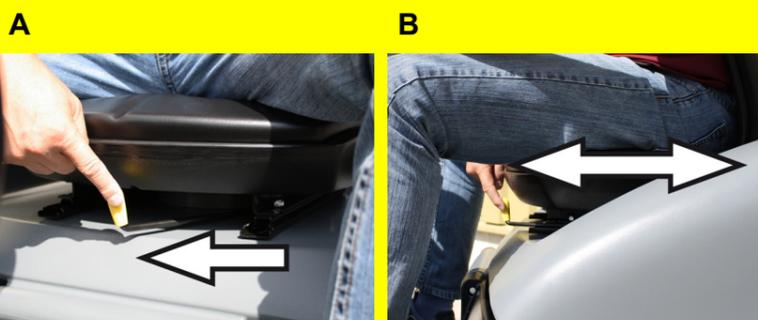


### Ajdst the seat

- A Pull seat adjustment lever inwards.
- B Slide seat, release lever and lock in place. Check that the seat is properly locked in position by attempting to move it backwards and forwards.

## Operation

### 1

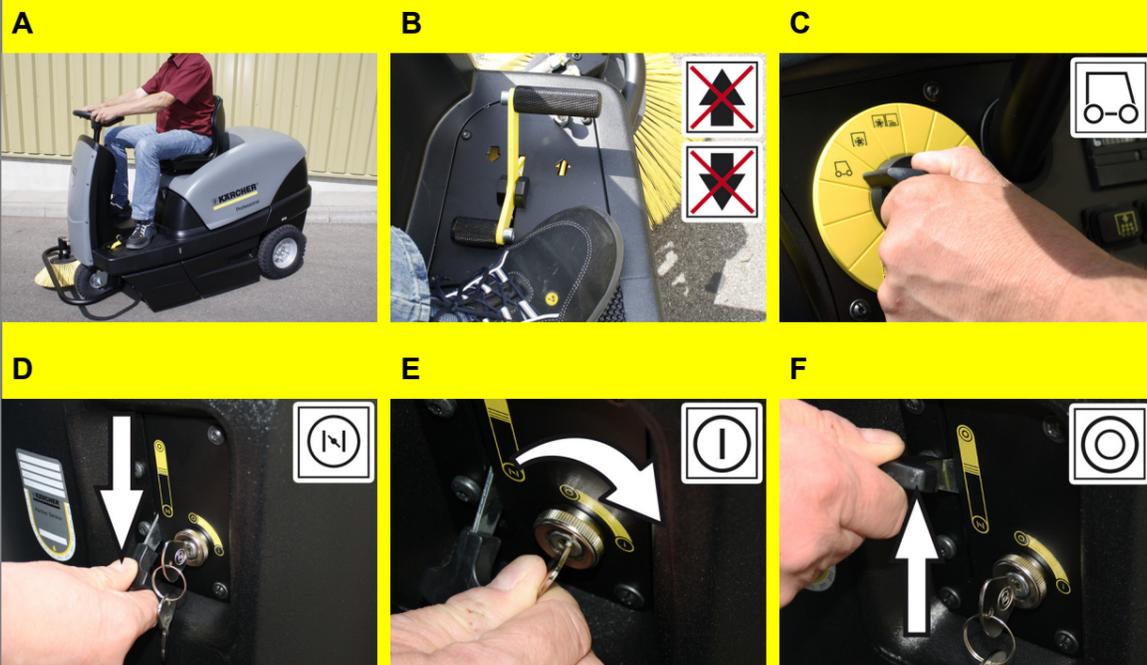

#### Starting the machine

- A Sit on the driver's seat.
- B Do NOT press the accelerator pedal.
- C Set programme switch to step 1 (driving).
- D If the motor is cold, press the choke lever down.
- E Turn the ignition key to position "I".  
If the machine starts, release the ignition key.
- F Once the engine is running, pull choke lever back up.

### 2



#### Drive the machine

- A Press slowly the accelerator pedal "forward".
- B Press slowly the accelerator pedal "reverse".
- C Release the accelerator pedal, the machine brakes automatically and stops.

### 3



#### Sweeping with sweep roller

- A Set programme switch to step 2.  
Roller brush is lowered.

### 4



#### Sweeping with side brushes

- A Set programme switch to step 3.  
Side brushes and roller brush are lowered.

### 5



#### Sweeping with bulk waste flap raised

- A Press the pedal for the bulk waste flap forwards and keep pressed down.  
To lower it, take foot off pedal.


### 6



#### Sweeping damp or wet floors


- A Open wet/dry flap.

## Operation

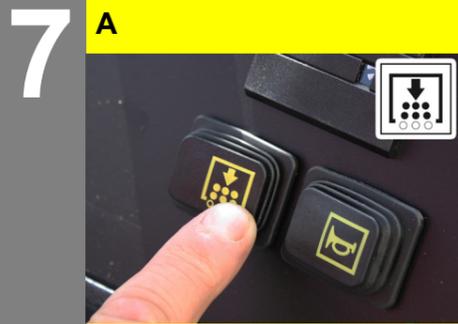

### Cleaning the dust filter


A During operations, the dust filter should be shaken and cleaned every 15-30 minutes depending on the amount of collected dust.

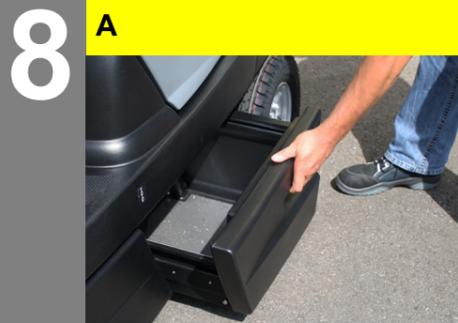

### Emptying waste container


A Raise the waste container slightly and pull it out.  
Empty waste container.  
Push in the waste container and lock it.  
Empty opposite waste container.

## Finish operation

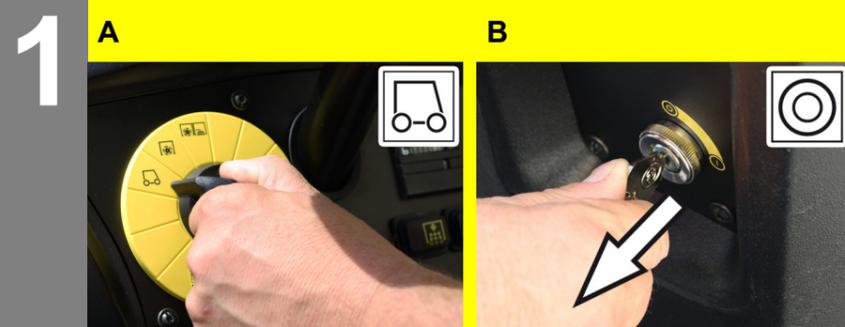


### Turn off the appliance

A Set programme switch to step 1 (driving).  
The side brush and roller brush are raised.  
B Turn ignition key to "0" and remove it.

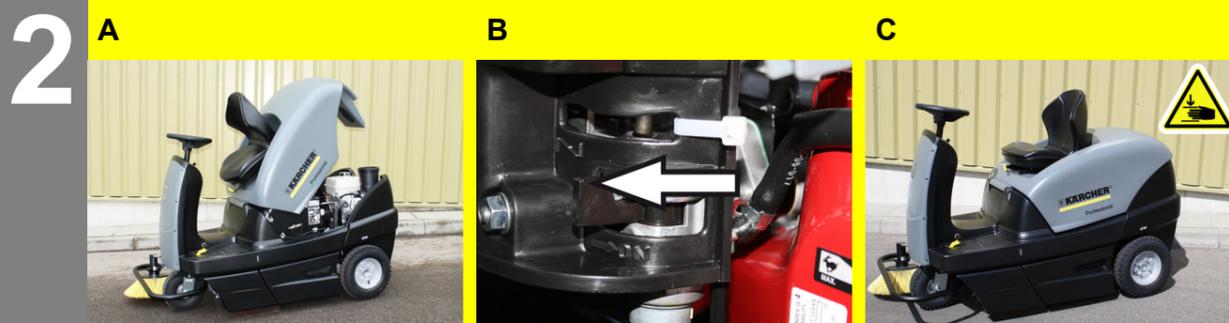

### Close fuel cock



A Open the device hood.  
B Close the fuel supply.  
C Close cover.

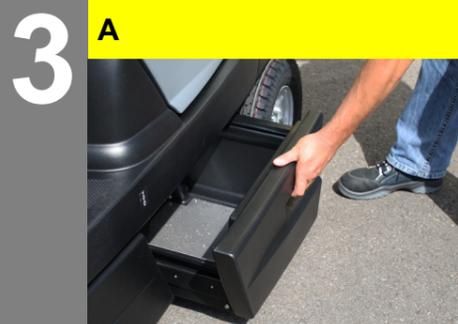

### Emptying waste container

A Raise the waste container slightly and pull it out.  
Empty waste container.  
Push in the waste container and lock it.  
Empty opposite waste container.

## Maintenance and care

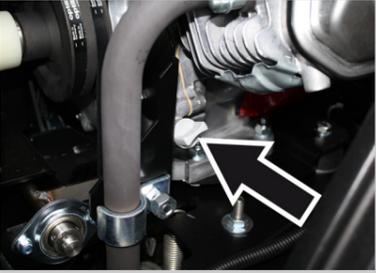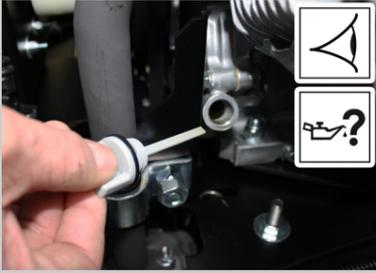		daily	weekly	Kärcher Customer Service
1	<p>A</p>  			
2	<p>A</p> 			
3	<p>A</p> 			
4	<p>A</p> 			

A Check engine oil level.

A Check air filter.


A Check dust filter and clean filter box, if required.

A Clean the machine with a damp cloth which has been soaked in mild detergent.

⚠ **Warning**  
Risk of damage! Do not wash down the appliance with water and do not use aggressive detergents.

## Troubleshooting

### 1

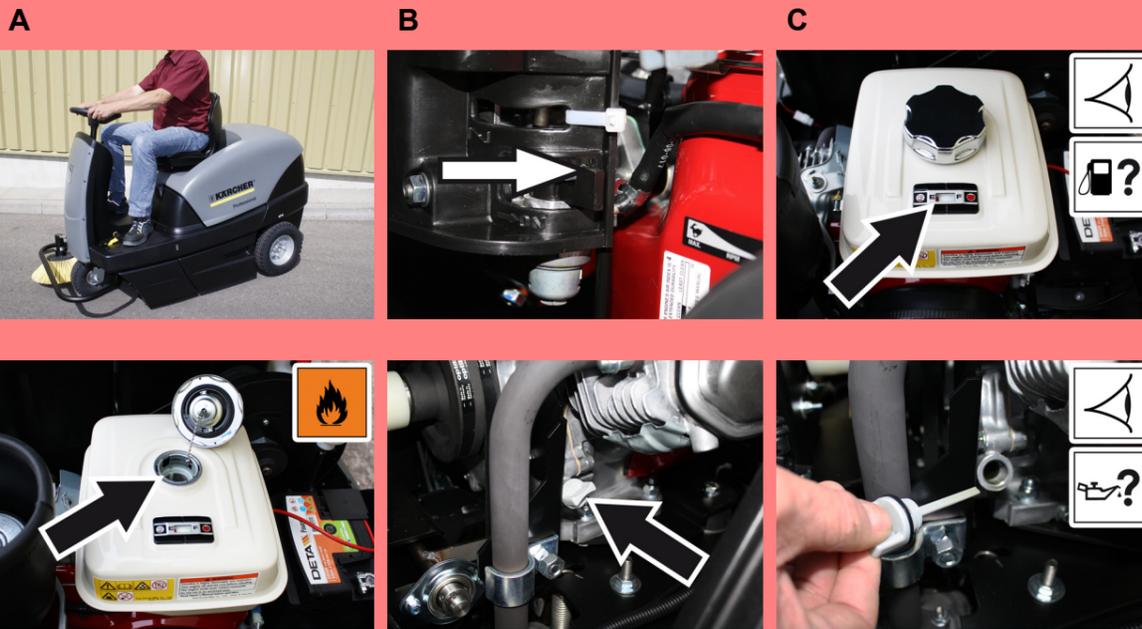

Appliance cannot be started

- A Sit on the driver seat, the seat contact switch gets activated
- B Open fuel cock
- C Check tank contents and oil level; refill oil and fuel.

### 2



Engine is running but machine is not moving

- A Check setting of freewheel lever


### 3



Machine is not sweeping properly

- A Check roller brush and side brushes for wear, replace if necessary.
- B Check function of bulk waste flap

### 4

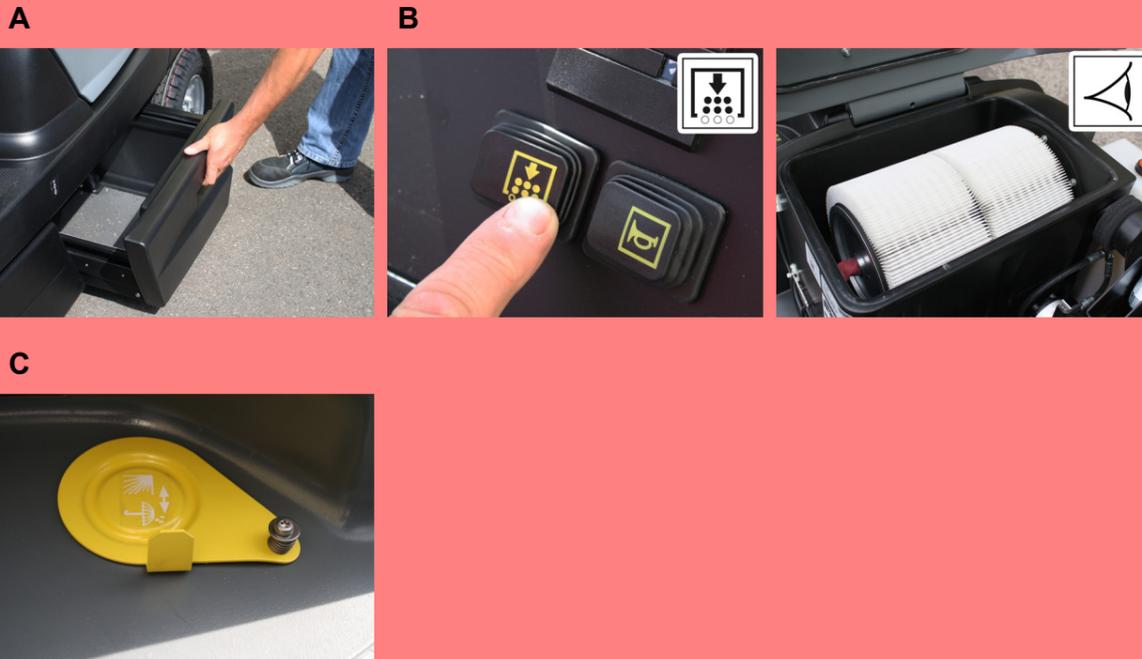

Dust gathers in the machine

- A Empty waste container
  - B Check dust filter, clean or replace
  - C Close wet/dry flap
- Roller brush does not turn.
- A Remove belts or cords from roller brush