



Warning
These are only brief instructions! Please read and comply with these instructions prior to using or servicing your appliance.
The non-compliance of the operating and safety instructions may lead to damages of the appliance and to dangers for the operator and other persons.

Start up

1



- A Open the device hood.
B Unplug the charger from the mains.
C Place the mains cable into the storage compartment.
D Close cover.



2



- A Sit on the driver's seat.
B Pull seat adjustment lever inwards.
C Slide seat, release lever and lock in place. Check that the seat is properly locked in position by attempting to move it backwards and forwards.

Operation

1





- Starting the machine**
A Sit on the driver's seat. Do NOT press the accelerator pedal.
B Set programme switch to step 1 (driving).
C Set main switch to "1".

2



- Drive forward**
A Set the travel direction switch to "forward".
B Press accelerator pedal down slowly. Release the accelerator pedal, the machine brakes automatically and stops.


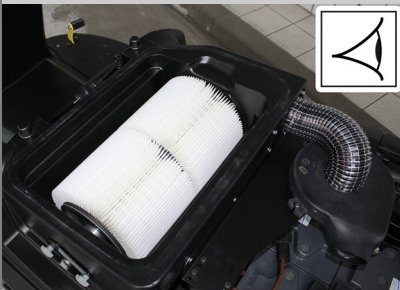

Operation

3	<div>A</div> <div>B</div>	<p>Reverse drive</p> <p>A Set the travel direction switch to "backwards".</p> <p>B Press accelerator pedal down slowly. Release the accelerator pedal, the machine brakes automatically and stops.</p>
4	<div>A</div>	<p>Sweeping with sweep roller</p> <p>A Set programme switch to step 2. Roller brush is lowered. The roller brush and the side brush will rotate.</p>
5	<div>A</div>	<p>Sweeping with side brushes</p> <p>A Set programme switch to step 3. Side brushes and roller brush are lowered.</p>
6	<div>A</div>	<p>Sweeping with bulk waste flap raised</p> <p>A Press the pedal for the bulk waste flap forwards and keep pressed down. To lower it, take foot off pedal.</p>
7	<div>A</div>	<p>Sweeping damp or wet floors</p> <p>A Open wet/dry flap.</p>
8	<div>A</div>	<p>Cleaning the dust filter</p> <p>A During operations, the dust filter should be shaken and cleaned every 15-30 minutes depending on the amount of collected dust.</p>
9	<div>A</div>	<p>Emptying waste container</p> <p>A Raise the waste container slightly and pull it out. Empty waste container. Push in the waste container and lock it. Empty opposite waste container.</p>




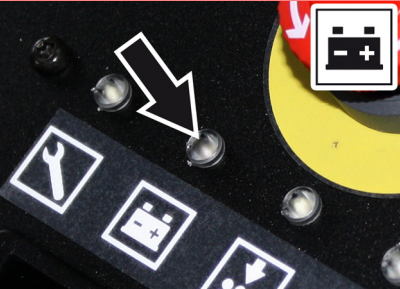






Finish operation

1	<div><div>A</div><div>B</div></div>		<div>Turn off the appliance<div>A Set programme switch to step 1 (driving). The side brush and roller brush are raised.<div>B Turn main key to "0" and remove it.</div></div></div>
	<div><div>A</div><div>B</div></div>		
2	<div><div>A</div></div>		<div>Emptying waste container<div>A Raise the waste container slightly and pull it out. Empty waste container. Push in the waste container and lock it. Empty opposite waste container.</div></div>
	<div><div>A</div></div>		

Maintenance and care

Maintenance and care			daily	weekly	Kärcher Customer Service
1	<div>A</div> 	<div>A</div> Check the sweeping roller and the side brush for wear and wrapped belts.			
2	<div>A</div> 	<div>A</div> Check dust filter and clean filter box, if required.			
3	<div>A</div> 	<div>A</div> Clean the machine with a damp cloth which has been soaked in mild detergent. <div>⚠ Warning</div> <i>Risk of damage! Do not wash down the appliance with water and do not use aggressive detergents.</i>			
4		Maintenance to be carried out every 50 operating hours Maintenance to be carried out every 100 operating hours			

Troubleshooting

1	A		B		C		Appliance cannot be started A Sit on the driver seat, the seat contact switch gets activated B Release emergency-stop button. C Set main switch to "1". D Check charging status of battery.
	D						Indicator lamp glows green Battery is charged (100...40%).
							Indicator lamp glows yellow Battery is discharged to 40 ... 20%.
							Indicator lamp blinks red Battery is almost discharged. The sweeping mode will be shortly switched off automatically. Indicator lamp glows red Battery is discharged. The sweeping mode will be terminated automatically (the sweeping aggregates cannot be taken into operation until the battery is charged).
2	A		B				Machine is not sweeping properly A Check roller brush and side brushes for wear, replace if necessary. B Check function of bulk waste flap
3	A		B				Dust gathers in the machine A Empty waste container B Check dust filter, clean or replace
							
4	A						Roller brush does not turn. A Remove belts or cords from roller brush
5	A						Error code is displayed. A Completely switch of the appliance and turn it back on.