



Scan for
ALDI
Training
Videos

Quick Guide (2) for your Kärcher scrubber drier to carry out daily floor cleaning



KÄRCHER

Step 1	Step 2	Step 3	Step 4
			
<ul style="list-style-type: none"> Set the desired speed for cleaning (0,5 – 5 km/h) 	<ul style="list-style-type: none"> Set water dosage 	<ul style="list-style-type: none"> Lower the brush head using the pedal <ul style="list-style-type: none"> The brush starts automatically when the operating lever is pressed 	<ul style="list-style-type: none"> Lower the squeegee using the hand lever <ul style="list-style-type: none"> Suction starts automatically
Step 5	Step 6	Step 7	Step 8
			
<ul style="list-style-type: none"> Perform Cleaning 	<p>During Cleaning</p> <ul style="list-style-type: none"> If necessary, pull the brush head pedal up to increase the contact pressure of the brushes <ul style="list-style-type: none"> Standard = 30 kg Increased = 50 kg 	<p>After cleaning</p> <ul style="list-style-type: none"> Continue driving approx. 5 meters with the brush head raised and the squeegee lowered to pick up residual water 	<p>After Cleaning</p> <ul style="list-style-type: none"> Raise the squeegee to the transport position

ATTENTION: Improper cleaning can cause damage. Do not spray the device over large areas with water. Do not use aggressive cleaning agents. For a detailed description of the individual maintenance work, see the Maintenance work chapter in your operating instructions.

National Service Hotline: (03) 9765 2301 or service@au.karcher.com

Hours of Operation – 7:30am–5:00pm AEST Mon–Fri Only

Triage Tech Support: Support with easy self-fix issues

7am-11am AEST Mon–Fri Only