


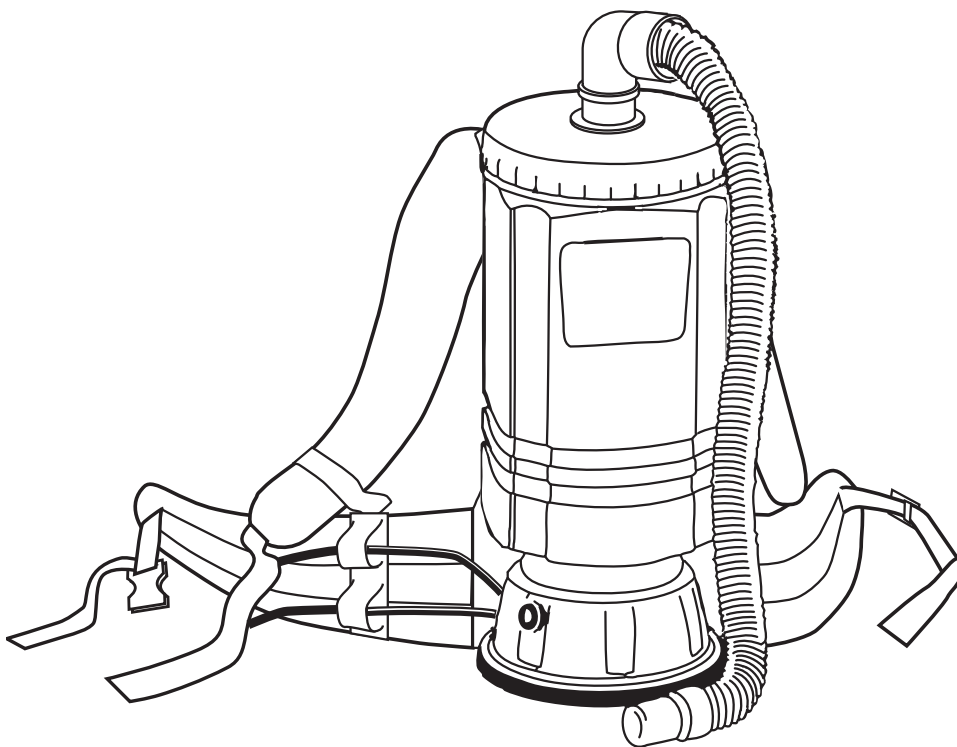

Operating instructions (ENG)

MODELS: VP6 10140130

UVP6 98413240

VP10 10140140

UVP10 98413250



Read these instructions before using the machine.



Machine Data Label

Model: _____

Date of Purchase: _____

Serial Number: _____

Dealer: _____

Address: _____

Phone Number: _____

Sales Representative: _____

Machine Data Label	2
Table of Contents	3
How To Use This Manual	4

Safety

IMPORTANT SAFETY INSTRUCTIONS	5
Hazard Intensity Level	7
Grounding Instructions	9
Safety Label Location	10

Operations

Technical Specifications	12
Equipment Set-Up	13
Machine Operation	13

Maintenance

Daily Maintenance	14
Troubleshooting	15
Service Schedule	15

Parts

VacPac	18
Wiring Diagram	20

Options

Accessory Tools and Kits	24
Suggested Spare Parts	26
Serial Numbers	27

How To Use This Manual

This manual contains the following sections:


- How to Use This Manual
- Safety
- Operations
- Maintenance
- Parts List
- Options

The HOW TO USE THIS MANUAL section will tell you how to find important information for ordering correct repair parts.

Parts may be ordered from authorized dealers. When placing an order for parts, the machine model and machine serial number are important. Refer to the MACHINE DATA box which is filled out during the installation of your machine. The MACHINE DATA box is located on the inside of the front cover of this manual.

Model:	_____
Date of Purchase:	_____
Serial Number:	_____
Dealer:	_____
Address:	_____
Phone Number:	_____
Sales Representative:	_____

The model and serial number of your machine is located above the safety label in the area as shown below.

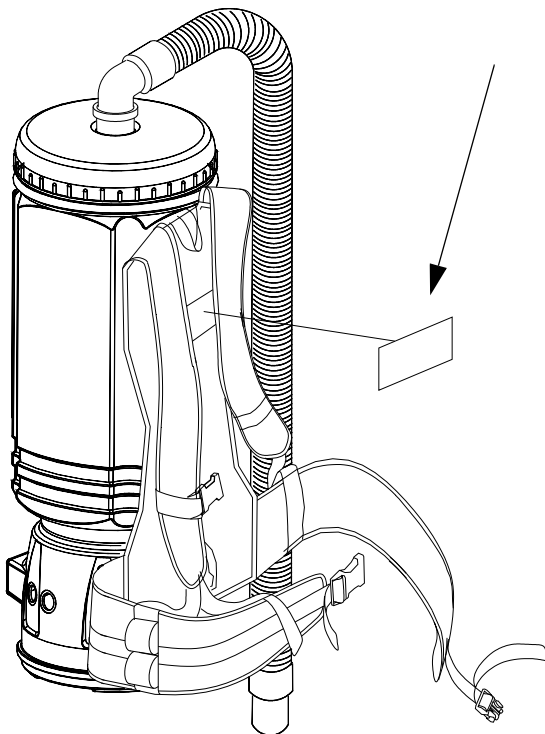

The SAFETY section contains important information regarding hazardous or unsafe practices of the machine. Levels of hazards are identified that could result in product damage, personal injury, or severe injury resulting in death.

The OPERATIONS section is to familiarize the operator with the operation and function of the machine.

The MAINTENANCE section contains preventive maintenance to keep the machine and its components in good working condition.

The PARTS LIST section contains assembled parts illustrations and corresponding parts list. The parts lists include a number of columns of information:

- **REF** – column refers to the reference number on the parts illustration.
- **PART NO.** – column lists the part number for the part.
- **PRV NO.** – reference number.
- **QTY** – column lists the quantity of the part used in that area of the machine.
- **DESCRIPTION** – column is a brief description of the part.
- **SERIAL NO. FROM** – If this column has an (*) and a Reference number, see the SERIAL NUMBERS page in the back of your manual. If column has two asterisk (**), call manufacturer for serial number. The serial number indicates the first machine the part number is applicable to. The main illustration shows the most current design of the machine. When a boxed illustration is shown, it displays the older design.
- **NOTES** – column for information not noted by the other columns.

NOTE: If a service or option kit is installed on your machine, be sure to keep the KIT INSTRUCTIONS which came with the kit. It contains replacement parts numbers needed for ordering future parts.

NOTE: The manual part number is located on the lower left corner of the front cover.

The OPTIONS section contains a list of accessory tools and kits.

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precaution must always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING THIS MACHINE.



To reduce the risk of fire, electric shock, or injury:

Do not leave the appliance when plugged in. Unplug from outlet when not in use and before servicing.

Do not use outdoors or on wet surfaces.

Do not allow to be used as a toy. Close attention is necessary when used by or near children.

Use only as described in this manual. Use only manufacturer's recommended attachments.

Do not use with damaged cord or plug. If appliance is not working as it should, had been dropped, damaged, left outdoors, or dropped into water, return to an authorized service center.

Do not pull or carry by cord, use cord for handle, close a door on cord, or pull cord around sharp edges or corners. Keep cord away from heated surfaces.

Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.

Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce airflow.

Do not operate without dust bag and filter in place.

Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.

Turn off all controls before unplugging.

Use extra care when cleaning on stairs.

Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.

Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.

This machine is not suitable for picking up hazardous dust.

Maintenance and repairs must be done by qualified personnel.

Connect to a properly grounded outlet. See grounding instructions.

SAVE THESE INSTRUCTIONS

IMPORTANTES MESURES DE SÉCURITÉ

L'utilisation d'un appareil électrique demande certaines précautions:

LIRE TOUTES LES INSTRUCTIONS AVANT DE FAIRE FONCTIONNER (CET APPAREIL).



AVERTISSEMENT

Pour réduire les risques d'incendie, de chocs électriques, ou de blessures :

Ne laissez pas l'appareil sans surveillance lorsqu'il est branché. Débranchez l'appareil lorsqu'il n'est pas utilisé et avant tout entretien.

Ne l'utilisez pas à l'extérieur ou sur des surfaces mouillées.

Ne pas permettre aux enfants de jouer avec l'appareil. Durant la manœuvre de la machine, prendre garde aux personnes environnantes et notamment aux enfants.

N'utiliser cette machine que comme décrit dans le présent manuel. N'utiliser que les accessoires conseillés par le fabricant.

Ne pas utiliser si le cordon ou la fiche est endommagé. Lorsque la machine ne fonctionne pas correctement, a fait l'objet d'une chute ou d'une détérioration, a été laissée à l'extérieur, est tombée dans l'eau, la retourner au centre de service agréé.

Ne pas tirer soulever ou traîner l'appareil par le cordon. Ne pas utiliser le cordon comme une poignée, le coincer dans l'embrasure d'une porte ou l'appuyer contre des arêtes vives ou des coins. Garder le cordon à l'écart des surfaces chaudes.

Ne pas débrancher en tirant sur le cordon. Tirer plutôt la fiche.

Ne mettez aucun objet dans les ouvertures. Ne l'utilisez pas avec une ouverture bloquée ; maintenez-le à l'écart de la poussière, des peluches, des cheveux, et de tout ce qui pourrait réduire le débit.

Ne pas utiliser sans sac à poussière et filtre en place.

Gardez les cheveux, les vêtements amples, les doigts et toutes les parties du corps à l'écart des ouvertures et des pièces mobiles.

Arrêtez toutes les commandes avant le débranchement.

Soyez très prudent lors du nettoyage des escaliers.

Ne l'utilisez pas pour ramasser des liquides inflammables ou combustibles, tels que l'essence ; ne l'utilisez pas dans les zones où ceux-ci peuvent être présents.

Ne pas ramasser quelque chose qui brûle ou fume, comme des cigarettes, des allumettes ou des cendres chaudes.

Cet appareil n'est pas conçu pour aspirer des poussières dangereuses.

L'entretien et les réparations de la machine doivent être effectuées par un personnel qualifié.

Cet appareil ne doit être connecté qu'à des prises ayant une sortie de terre. Se reporter aux instructions de mise à la terre.

CONSERVER CES INSTRUCTIONS

Hazard Intensity Level

The following symbols are used throughout this guide as indicated in their descriptions:

HAZARD INTENSITY LEVEL

There are three levels of hazard intensity identified by signal words **-WARNING** and **CAUTION** and **FOR SAFETY**. The level of hazard intensity is determined by the following definitions:

WARNING:

WARNING - Hazards or unsafe practices which COULD result in severe personal injury or death.

CAUTION:

CAUTION - Hazards or unsafe practices which could result in minor personal injury or product or property damage.

FOR SAFETY: To identify actions which must be followed for safe operation of equipment. Report machine damage or faulty operation immediately. Do not use the machine if it is not in proper operating condition. Following is information that signals some potentially dangerous conditions to the operator or the equipment. Read this information carefully. Know when these conditions can exist. Locate all safety devices on the machine. Please take the necessary steps to train the machine operating personnel.

FOR SAFETY:

DO NOT OPERATE MACHINE:

Unless Trained and Authorized.

Unless Operation Guide is Read and understood.

In Flammable or Explosive areas.

In areas with possible falling objects.

WHEN SERVICING MACHINE:

Avoid moving parts. Do not wear loose clothing; jackets, shirts, or sleeves when working on the machine. Use manufacturer approved replacement parts.

DEGRÉS DE RISQUES EN CAS DE DANGER

Les symboles ci-dessous sont utilisés à travers ce manuel comme illustré dans leurs descriptions :

DEGRÉS DE RISQUES EN CAS DE DANGER

Il existe trois degrés de risques identifiés par les termes signalétiques -AVERTISSEMENT et ATTENTION et POUR VOTRE SÉCURITÉ. Le degré de risque est défini de la manière suivante :



AVERTISSEMENT - Dangers ou méthodes dangereuses qui POURRAIENT provoquer des blessures graves ou entraîner la mort.



ATTENTION - Dangers ou méthodes dangereuses qui pourraient provoquer des blessures légères ou une détérioration du produit ou des biens immobiliers.

POUR VOTRE SÉCURITÉ : ce signe permet d'identifier les mesures de précaution à prendre pour assurer un bon fonctionnement du matériel.

Rendre compte immédiatement d'une défaillance ou d'une détérioration de la machine. Ne pas utiliser la machine si celle-ci ne fonctionne pas correctement. Lire soigneusement les informations ci-dessous signalant certains dangers potentiels pour l'opérateur de la machine. L'opérateur doit être absolument au courant de ces dangers potentiels. Localiser tous les dispositifs de sécurité sur la machine. Il est conseillé de prendre les mesures nécessaires pour former le personnel opérateur.

POUR VOTRE SÉCURITÉ :

NE PAS MANOEUVRER LA MACHINE :

Lorsqu'on n'est pas expérimenté ou qualifié.

Lorsque le guide d'utilisation n'est pas été lu ou compris.

Dans des zones inflammables ou explosives.

Dans des zones où des objets peuvent tomber.

LORS DE L'ENTRETIEN DE LA MACHINE :

Éviter les parties amovibles. Ne pas porter de vêtements amples, tels que des vestes, des chemises ou des vêtements avec manches lors de l'utilisation de la machine. Utiliser les pièces détachées Windsor homologuées.

Grounding Instructions

THIS PRODUCT IS FOR COMMERCIAL USE ONLY.

ELECTRICAL:

In the USA this machine operates on a standard 15 amp 115V, 60 hz, A.C. power circuit. The amp, hertz, and voltage are listed on the data label found on each machine. Using voltages above or below those indicated on the data label will cause serious damage to the motors.


Extension Cords:

A suitable extension cord is provided with this appliance. The safe operation of the appliance is dependent on the use of a suitable extension cord. If a cord other than the one provided is used, it must be type SJT, at least 16 gauge, and limited to no more than 50 feet in length.

Grounding Instructions:

This appliance must be grounded. If it should malfunction or break down, grounding provides a path of least resistance for electric current to reduce the risk of electric shock. This appliance is equipped with a cord having an equipment-grounding conductor and grounding plug. The plug must be inserted into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.

This appliance is for use on a nominal 120-volt circuit, and has a grounded plug that looks like the plug in "Fig. A". A temporary adaptor that looks like the adaptor in "Fig. C" may be used to connect this plug to a 2-pole receptacle as shown in "Fig. B", if a properly grounded outlet is not available. The temporary adaptor should be used only until a properly grounded outlet (Fig. A) can be installed by a qualified electrician. The green colored rigid ear, lug, or the like extending from the adaptor must be connected to a permanent ground such as a properly grounded outlet box cover. Whenever the adaptor is used, it must be held in place by a metal screw.

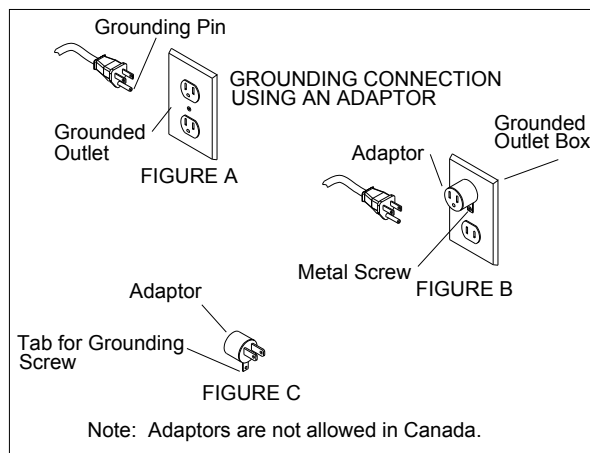

⚠ CAUTION:


Improper connection of the equipment-grounding conductor can result in a risk of electric shock. Check with a qualified electrician or service person if you are in doubt as to whether the outlet is properly grounded. Do not modify the plug provided with the appliance - if it will not fit the outlet, have a proper outlet installed by a qualified electrician.

⚠ AVERTISSEMENT:

Le raccordement incorrect du conducteur de terre d'équipement peut entraîner des risques d'électrocution. Vérifiez auprès d'un électricien qualifié ou d'un responsable de l'entretien si vous avez quelque doute que ce soit quant au raccordement à la terre de votre prise murale. Ne modifiez pas la fiche fournie avec l'appareil : si elle ne correspond pas à la prise murale, faites installer une prise adéquate par un électricien qualifié.

Safety Label Location

NOTE: This drawing indicates the location of safety label on the machine. If at any time the label becomes illegible, promptly replace it.

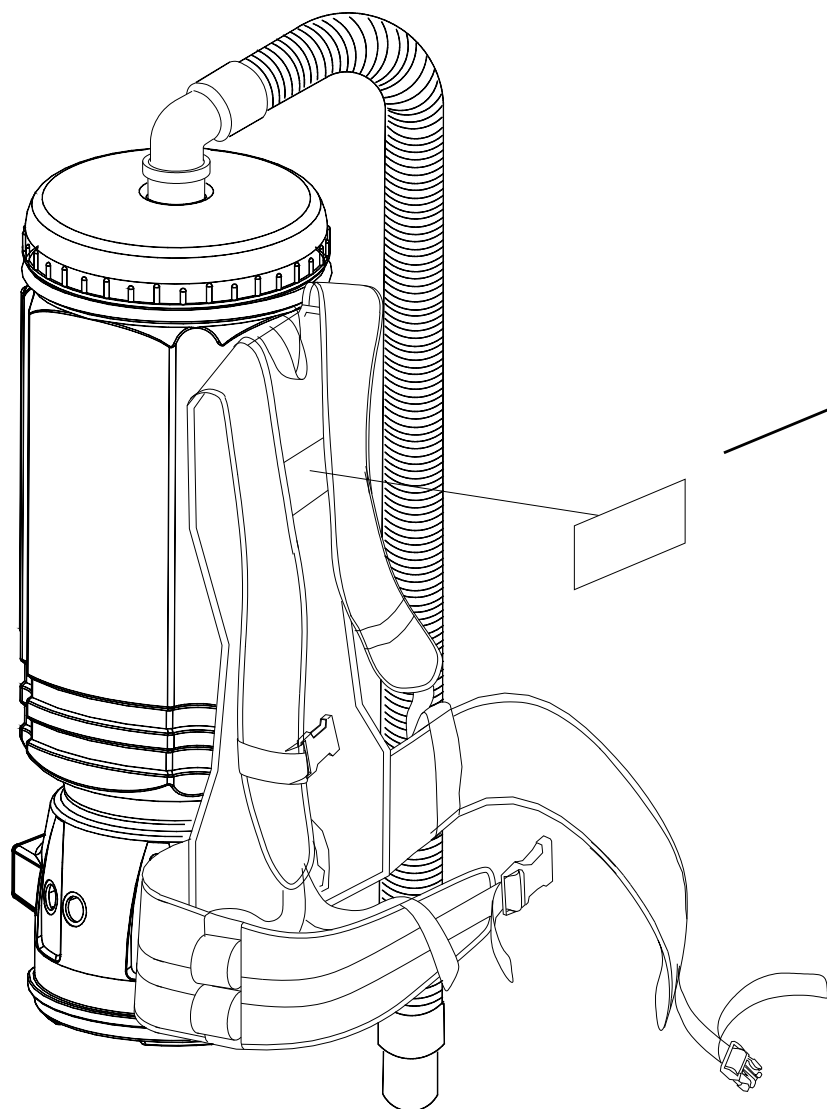

WARNING LABEL

86198960

Operations

Technical Specifications

ITEM	DIMENSION/CAPACITY
Power Type:	
Electrical:	115V, 8A, 60 Hz
Electric Vacuum Motor:	Single Stage = 1.6 HP, 80 CFM, (2.2 Cubic Meter/Min.)
Waterlift:	95 Inches of Water
Filter Bag:	VP6/UVP6 = 6 Quart
	VP10/UVP10 = 10 Quart
General Dimensions/Weight	
Vacuum Hose:	5' (1.5m) X 1.5" (3.8cm) Diameter
Weight:	VP6/UVP6 = 10.1 Lb. (4.6 Kg)
	VP10/UVP10 = 11.0 Lb. (5.0 Kg)
Depth:	10.5" (267mm)
Height:	VP6/UVP6 = 19.8" (503mm)
	VP10/UVP10 = 23.7" (602mm)
Width:	8.8" (224mm)
Power Cable:	50' (15.2m) (16 Gauge)

Equipment Set-Up


1. Insert hose (90° swivel cuff end) into top of unit. Attach desired cleaning tool.

2. Unclip waist and sternum straps. Loosen shoulder straps and hip belt.

The straps are easily adjusted while the unit is being worn.

1. To loosen lift up on tab

2. To tighten pull on strap

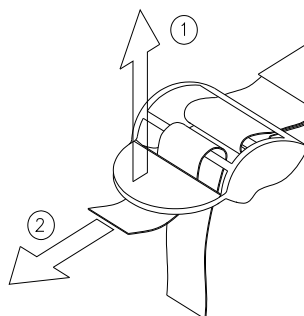

3. Put on unit by placing arms through shoulder straps and secure and tighten the hip belt.

(For the most comfort, adjust unit so that the hip belt covers the front hipbones and the bowed-out portion of the back padding rests on the small of the back.)

4. Tighten the shoulder straps to the point where the unit's weight just starts to pull down on the shoulders. Ideally most of the unit's weight will remain on the waist.
5. Adjust the sternum strap position to be high on the chest and tighten till comfortable.
6. Plug in power cord from machine into properly grounded wall outlet (see grounding instructions).

Machine Operation

The unit is a commercial vacuum designed for dry pick-up only.

1. Place a paper bag inside the cloth bag in the vacuum chamber. Be sure the pleated filter is in place at the bottom of the chamber.
2. Attach the accessories to be used.
3. Put unit on back and adjust straps.
4. Plug unit into properly grounded wall outlet (see grounding instructions).
5. Turn machine on or off using switch on left side of machine.
6. To empty, remove the cover and dump paper bag into trash receptacle. Shake cloth bag vigorously each time paper bag is emptied to prevent soil build-up, which would clog filter.

Maintenance

Daily Maintenance

(At the end of each working day)

1. Turn cloth filter bag inside out and brush clean. Do not use a wire brush. Cloth bags can be vacuumed with another machine or washed occasionally in warm water using a mild, water-based soap without harming filtering capacity. Allow to dry completely before using.
2. Wipe down exterior of machine.
3. Check round pleated filter at bottom of vac chamber and clean if necessary. For best results, replace the filter every six months.
4. Inspect hose for wear. Frayed or cracked hoses should be replaced to avoid vacuum loss.
5. Inspect power cord for wear. To prevent electric shock, immediately replace cords with frayed or cracked insulation.

Troubleshooting

PROBLEM.	CAUSE	SOLUTION
No power, vacuum motor will not run	Is the cord plugged in?	Plug in cord.
	Circuit breaker tripped in building.	Reset breaker.
	Thermal protector tripped	Motor will restart after cooling down. To prevent repeated tripping, clear all restrictions out of hose and tools, replace paper filter bag. Clean cloth filter bag and internal pleated filter, clear all restrictions to the exhaust air flow.
	Faulty switch.	Call for service.
	Faulty power cord.	Call for service.
Poor vacuum performance	Debris plugging hose, wand or accessory tool.	Remove debris.
	Paper bag full.	Replace bag.
	Cloth bag plugged.	Remove from machine, turn inside out and shake or brush clean.
	Hosecuffs loose or hose cracked.	Tighten cuffs or replace hose.
	Cap loose on top of machine.	Tighten cap.

Service Schedule


MAINTENANCE	DAILY	WEEKLY	MONTHLY	QUARTERLY	BI-ANNUALLY
Check bag and replace if necessary	*				
Check hoses for wear, blockages, or damage	*				
Check major gaskets for leakage	*				
Check brush-should be clean with no lint or strings attached	*				
Wind cord and store in upright position	*				
Check hoses for cracks or holes		*			
Check all cords and handles for damage or cracks; replace as necessary		*			
Inspect and replace all filters including exhaust, intake, and microfilters			*		
Check all gaskets for wear and leakage			*		
Check vac motor carbon brushes				*	
Check for arcing and pitting on any electrical contacts; replace if found				*	
Inspect and clean vac shoe; check for dents and damage which would detrimentally effect vacuum and brush movement				*	
Check overall performance of machine				*	
Replace pleated dome filter					*

PARTS



REF	PART NO	QTY	DESCRIPTION	SERIAL NO. FROM	NOTES
1	86198740	1	CAP, BLACK		
2	86199090	2	SPACER, BACK PLATE		
3	86198730	1	BUMPER		
4A	86198840	1	FILTER BAG, MICRO-TEX (CLOTH) LG		
4B	86198900	1	FILTER BAG, MICRO-TEX (CLOTH) SM		
5A	86198850	1	FILTER BAG, MICRO (PAPER) LG 10/PKG		
5B	86198910	1	FILTER BAG, MICRO (PAPER) SM 10/PKG		
6	86237870	1	GASKET, 5.0ODX2.38IDX.25T		
7	86392850	1	FILTER, DOME, VAC MOTOR, HEPA		
8	86198880	1	HOUSING, FILTER		
9	86199000	1	MOTOR, VACUUM 115V		
10	86199010	1	SEAL, MOTOR		
11	86199050	1	RING, MTR COMP W/ SCREWS		
11A	86199070	1	SCR, MTR COMP RING (4/PKG)		
12	86198790	1	DIFFUSER, AIR W/ SCREWS		
12A	86199080	1	SCR, AIR DIFFUSER (2/PKG)		
13	86198890	1	FILTER, AIR/SOUND DIFFUSER		
14	86198950	1	KIT, VP SWCH/PWR CORD, W/O BOX		
15	86199020	2	NUT, STRAIN RELIEF W/ WASHER		
16	86198830	2	FASTENER SET, FILTER HOUSING		
17	86198750	1	CORD ASM, 50FT EXTENSION		
18	86225100	1	SWITCH HOUSING W/ SCREWS		
19	86199120	1	SWITCH		
20	86198800	3	FASTENER SET, MOTOR MOUNT		
21	86198810	1	FASTENER SET, BACK PLATE (TOP)		
21A	86198820	1	FASTENER SET, BACK PLATE (BTM)		
22	86198930	1	FOAM, DIFFUSER		
23	86198990	1	LATCH, WAIST BELT		
24	86312540	1	HARNESS ASSY, VP6/VP10		
25	86198940	1	HOSE ASSEMBLY		
26	86392580	1	SCREW, M5-.8 X 14 PPNHMS DIN7985		

Wiring Diagram

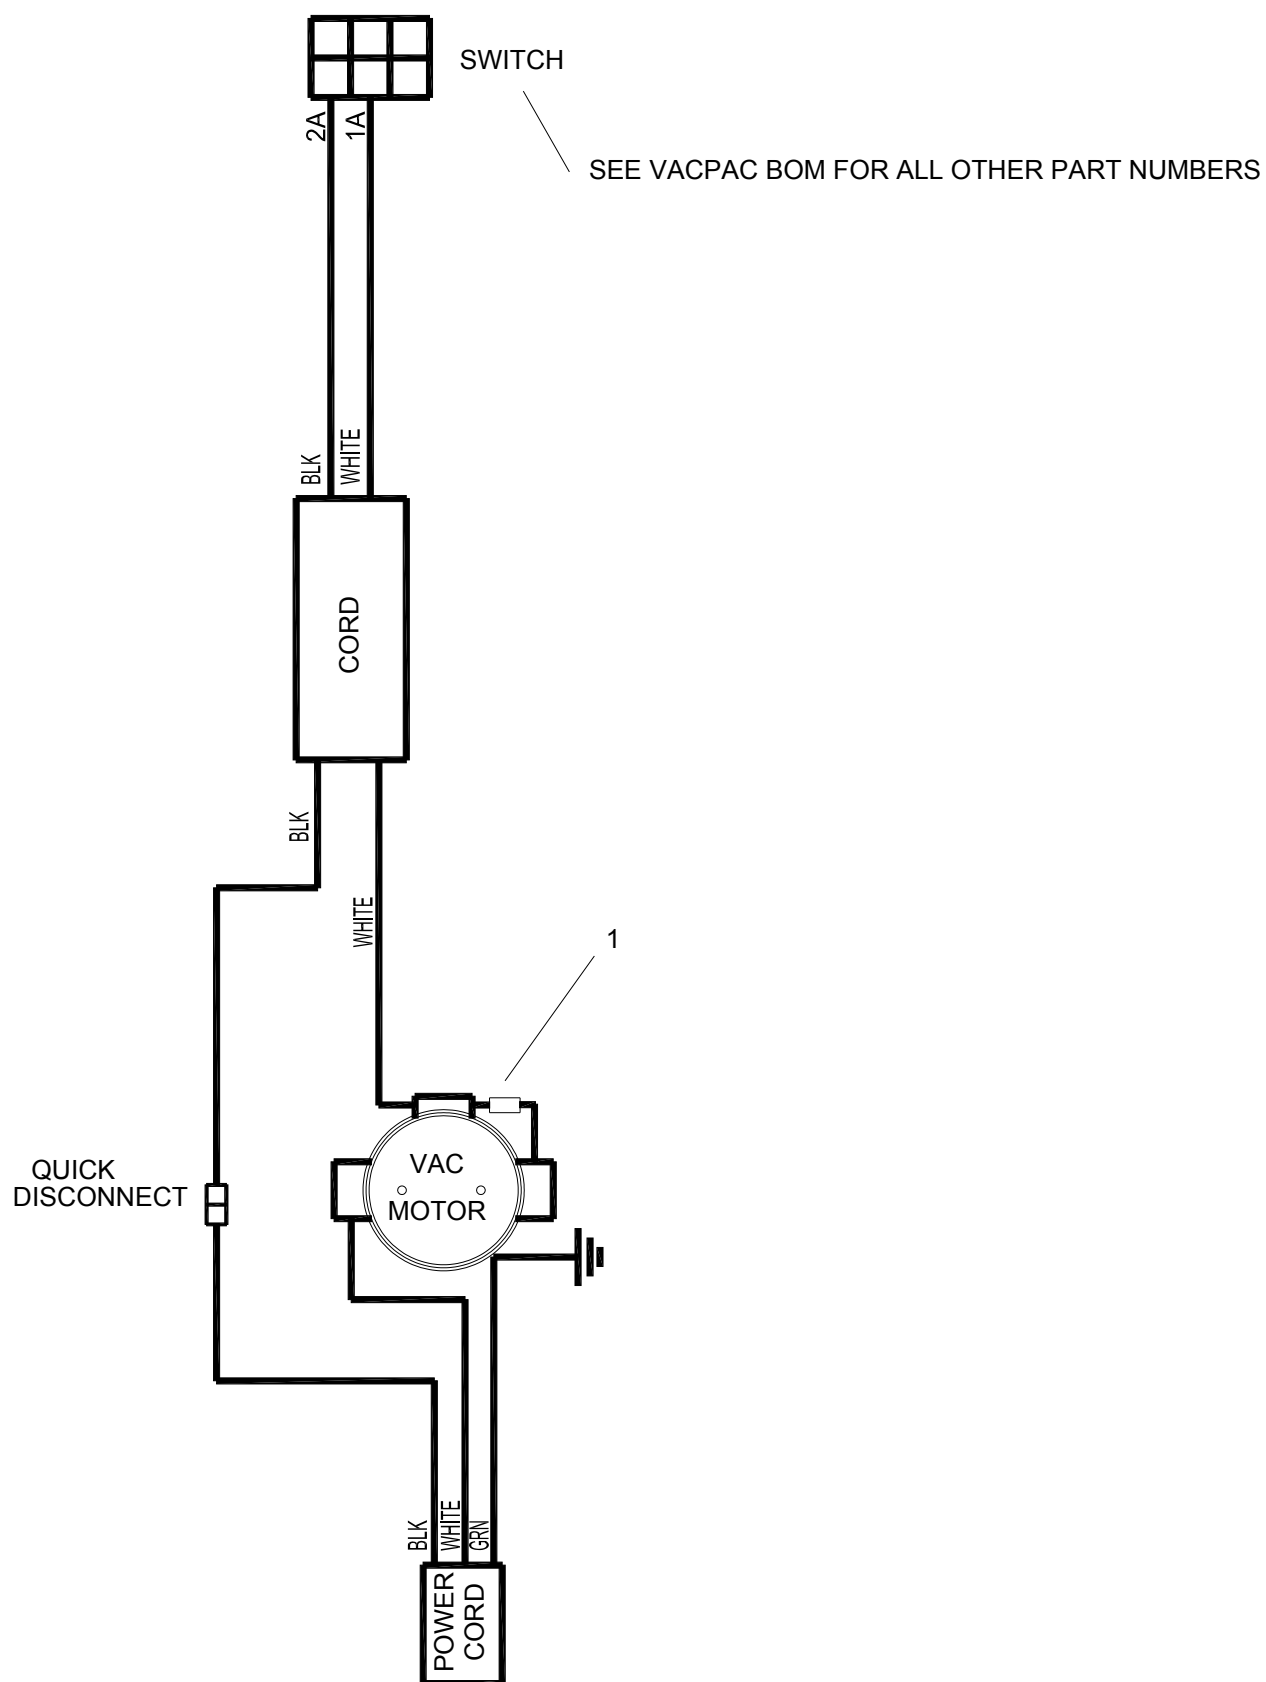


REF	PART NO.	QTY	DESCRIPTION	SERIAL NO.	NOTES
1	86218010	1	FUSE ASM, VP6/10		

Notes:

OPTIONS

Accessory Tools and Kits

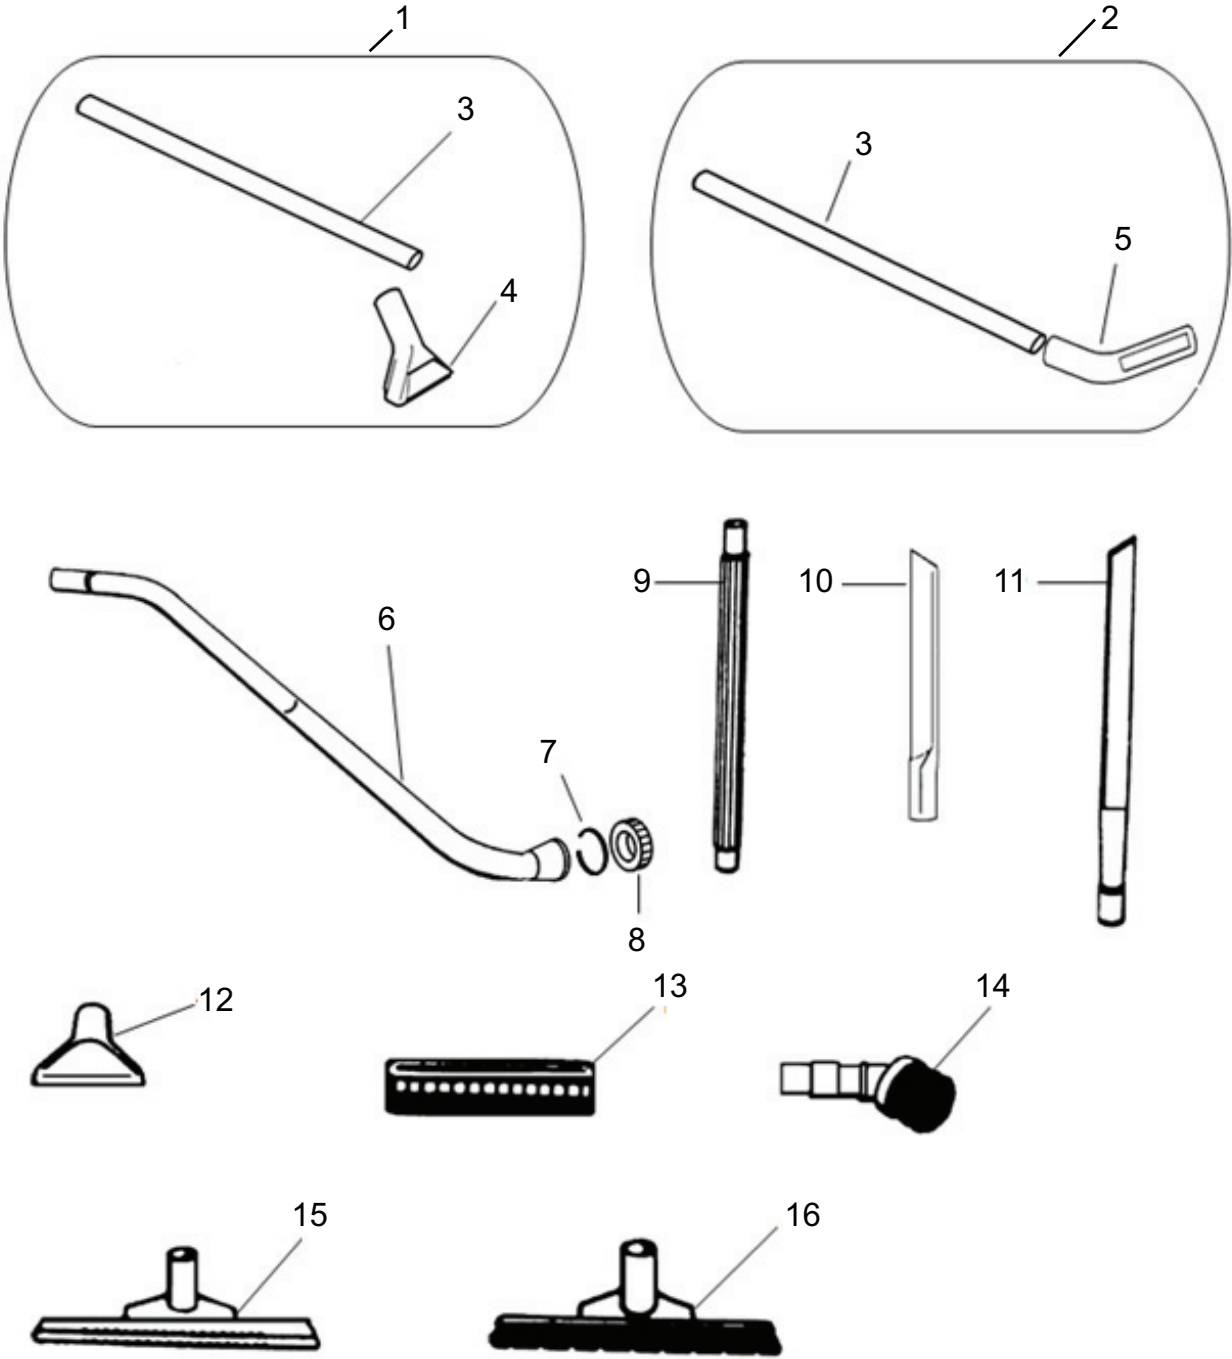

REF	PART NO.	QTY	DESCRIPTION	SERIAL NO. FROM	NOTES
1	86041440	1	VAC PAC SPOTLITE KIT		
2	86041450	1	VAC QUICK SWEEP		
3	86090220	1	WAND, SPOTTER		
4	86063120	1	TOOL, SPOT LITE		
5	86033020	1	TOOL, QUICK SWEEP		
6	86286660	1	WAND, DOUBLE CURVE 2 PC. ALUM.		INCL 7 & 8
7	86199060	1	RING, BOTTOM WAND		
8	86199030	1	NUT, BOTTOM WAND		
9	86000090	1	TUBE, 20" EXTENSION		
10	86198760	1	TOOL, 16" CREVICE		
11	86284510	1	TOOL, 28" PLASTIC CREVICE		
12	86000080	1	TOOL, 5" UPHOLSTERY		
13	86283600	1	BRUSH, UPHOLSTERY		
14	86000070	1	BRUSH, 3" DUST		
15	86284450	1	TOOL, CARPET		
16	86284440	1	TOOL, BRISTLE SHOD DRY PICK-UP		

Suggested Spare Parts

PART NO	DESCRIPTION	NOTES:
86198840	VAC PAC TM CLOTH BAG FOR VP10 ONLY	
86198900	FILTER BAG LINER, CLOTH VP6	
86198850	FILTER BAG, VP10 PAPER PKG/10	
86198910	FILTER BAG, VP6 PAPER PKG/10	
86392850	FILTER, DOME, VAC MOTOR, HEPA	
86198890	FILTER, AIR/SOUND DIFFUSER	
86218010	FUSE ASM, VP6/10	
86198710	BRUSH SET, VP6/10 (PKG 2)	

REF. NO.	MODEL: SERIAL #:
1	-