




1700

OPERATOR'S MANUAL

- 1710 ■ 1720 ■ 1722 ■ 1723 ■ 1724 ■ 1725 ■ 1743
 - 1744 ■ 1745 ■ 1753 ■ 1754 ■ 1755
-

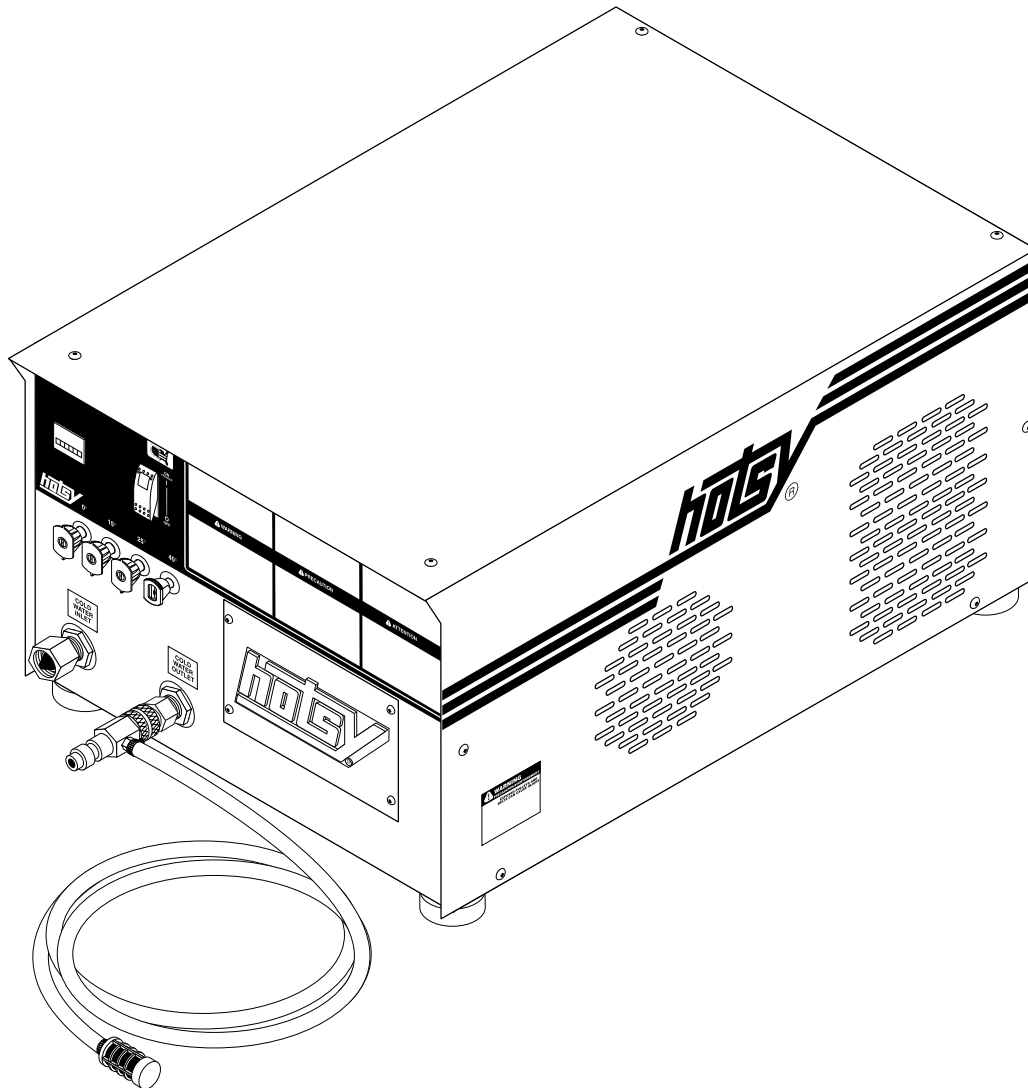

For the Hotsy Dealer nearest you, consult our web page at www.hotsy.com

8.914-380.0

1710 SPECIFICATIONS

- Pump Volume At Pump Head: 2.75 GPM
- Pump Pressure At Pump Head: 1000 PSI
- Machine Voltage: 120VAC/60Hz/1Ph
- Total Machine Amperage: 20 Amps
- Machine Weight: 154 Lbs.
- Shipping Weight: 200 Lbs.
- Machine Dimensions:
Length = 30.25", Width = 21", Height = 15"

1720 SPECIFICATIONS

- Pump Volume At Pump Head: 3.9 GPM
- Pump Pressure At Pump Head: 2000 PSI
- Machine Voltage: 230VAC/60Hz/1Ph
- Total Machine Amperage: 28 Amps
- Machine Weight: 229 Lbs.
- Shipping Weight: 275 Lbs.
- Machine Dimensions:
Length = 30.25", Width = 21", Height = 15"

1722 SPECIFICATIONS

- Pump Volume At Pump Head: 3.9 GPM
- Pump Pressure At Pump Head: 2000 PSI
- Machine Voltage: 208VAC/60Hz/1Ph
- Total Machine Amperage: 30 Amps
- Machine Weight: 229 Lbs.
- Shipping Weight: 250 Lbs.
- Machine Dimensions:
Length = 30.25", Width = 21", Height = 15"

1723 SPECIFICATIONS

- Pump Volume At Pump Head: 3.9 GPM
- Pump Pressure At Pump Head: 2000 PSI
- Machine Voltage: 208VAC/60Hz/3Ph
- Total Machine Amperage: 16 Amps
- Machine Weight: 229 Lbs.
- Shipping Weight: 250 Lbs.
- Machine Dimensions:
Length = 30.25", Width = 21", Height = 15"

1724 SPECIFICATIONS

- Pump Volume At Pump Head: 3.9 GPM
- Pump Pressure At Pump Head: 2000 PSI
- Machine Voltage: 230VAC/60Hz/3Ph
- Total Machine Amperage: 14.4 Amps
- Machine Weight: 229 Lbs.
- Shipping Weight: 250 Lbs.
- Machine Dimensions:
Length = 30.25", Width = 21", Height = 15"

1725 SPECIFICATIONS

- Pump Volume At Pump Head: 3.9 GPM
- Pump Pressure At Pump Head: 2000 PSI
- Machine Voltage: 460VAC/60Hz/3Ph
- Total Machine Amperage: 7.2 Amps
- Machine Weight: 229 Lbs.
- Shipping Weight: 250 Lbs.
- Machine Dimensions:
Length = 30.25", Width = 21", Height = 15"

1743 SPECIFICATIONS

- Pump Volume At Pump Head: 4.76 GPM
- Pump Pressure At Pump Head: 3000 PSI
- Machine Voltage: 208VAC/60Hz/3Ph
- Total Machine Amperage: 31.3 Amps
- Machine Weight: 257 Lbs.
- Shipping Weight: 302 Lbs.
- Machine Dimensions:
Length = 30.25", Width = 21", Height = 15"

1744 SPECIFICATIONS

- Pump Volume At Pump Head: 4.76 GPM
- Pump Pressure At Pump Head: 3000 PSI
- Machine Voltage: 230VAC/60Hz/3Ph
- Total Machine Amperage: 26.8 Amps
- Machine Weight: 257 Lbs.
- Shipping Weight: 300 Lbs.
- Machine Dimensions:
Length = 30.25", Width = 21", Height = 15"

1745 SPECIFICATIONS

- Pump Volume At Pump Head: 4.76 GPM
- Pump Pressure At Pump Head: 3000 PSI
- Machine Voltage: 460VAC/60Hz/3Ph
- Total Machine Amperage: 13.5 Amps
- Machine Weight: 257 Lbs.
- Shipping Weight: 315 Lbs.
- Machine Dimensions:
Length = 30.25", Width = 21", Height = 15"

1753 SPECIFICATIONS

- Pump Volume At Pump Head: 5.93 GPM
- Pump Pressure At Pump Head: 2500 PSI
- Machine Voltage: 208VAC/60Hz/3Ph
- Total Machine Amperage: 31.3 Amps
- Machine Weight: 257 Lbs.
- Shipping Weight: 320 Lbs.
- Machine Dimensions:
Length = 30.25", Width = 21", Height = 15"

1754 SPECIFICATIONS

- Pump Volume At Pump Head: 5.93 GPM
- Pump Pressure At Pump Head: 2500 PSI
- Machine Voltage: 230VAC/60Hz/3Ph
- Total Machine Amperage: 26.8 Amps
- Machine Weight: 257 Lbs.
- Shipping Weight: 310 Lbs.
- Machine Dimensions:
Length = 30.25", Width = 21", Height = 15"

1755 SPECIFICATIONS

- Pump Volume At Pump Head: 5.93 GPM
- Pump Pressure At Pump Head: 2500 PSI
- Machine Voltage: 460VAC/60Hz/3Ph
- Total Machine Amperage: 13.5 Amps
- Machine Weight: 257 Lbs.
- Shipping Weight: 310 Lbs.
- Machine Dimensions:
Length = 30.25", Width = 21", Height = 15"

CONTENTS

Introduction and General Safety Information	6-7
Operating Instructions.....	8
Component Identification	9
Detergent Injector	10
General Washing Techniques and Maintenance.....	11
Multi-Room Installation	12
Troubleshooting.....	13-14
Maintenance	15
Oil Change Record	15

V â[[â\ ę

Model Number _____

Serial Number _____

Date of Purchase _____

The model and serial numbers will be found on a decal attached to the pressure washer. You should record both serial number and date of purchase and keep in a safe place for future reference.

INTRODUCTION & SAFETY INFORMATION

Thank you for purchasing this Pressure Washer.
We reserve the right to make changes at any time without incurring any obligation.

Owner/User Responsibility:

The owner and/or user must have an understanding of the manufacturer's operating instructions and warnings before using this pressure washer. Warning information should be emphasized and understood. If the operator is not fluent in English, the manufacturer's instructions and warnings shall be read to and discussed with the operator in the operator's native language by the purchaser/owner, making sure that the operator comprehends its contents.

Owner and/or user must study and maintain for future reference the manufacturers' instructions.

The operator must know how to stop the machine quickly and understand the operation of all controls. Never permit anyone to operate the engine without proper instructions.


This manual should be considered a permanent part of the machine and should remain with it if machine is resold.

When ordering parts, please specify model and serial number. Use only identical replacement parts.

This machine is to be used only by trained operators.

IMPORTANT SAFETY INFORMATION

! WARNING



READ OPERATOR'S MANUAL THOROUGHLY PRIOR TO USE.

WARNING: To reduce the risk of injury, read operating instructions carefully before using.

1. Read the owner's manual thoroughly. Failure to follow instructions could cause malfunction of the machine and result in death, serious bodily injury and/or property damage.
2. Know how to stop the machine and bleed pressure quickly. Be thoroughly familiar with the controls.
3. Stay alert — watch what you are doing.
4. All installations must comply with local codes. Contact your electrician, plumber, utility company or the selling distributor for specific details. If your machine is rated 250 volts or less, single phase will be provided with a ground fault circuit interrupter (GFCI). If rated more than 250 volts, or more than single phase this product should only be connected to a power supply receptacle protected by a GFCI.

DANGER: Improper connection of the equipment-grounding conductor can result in a risk of electrocution. Check with a qualified electrician or service personnel if you are in doubt as to whether the outlet is properly grounded. Do not modify the plug provided with the product - if it will not fit the outlet, have a proper outlet installed by a qualified electrician. Do not use any type of adaptor with this product

! WARNING



KEEP WATER SPRAY AWAY FROM ELECTRICAL WIRING.

WARNING: Keep wand, hose, and water spray away from electric wiring or fatal electric shock may result.

5. To protect the operator from electrical shock, the machine must be electrically grounded. It is the responsibility of the owner to connect this machine

to a UL grounded receptacle of proper voltage and amperage ratings. Do not spray water on or near electrical components. Do not touch machine with wet hands or while standing in water. Always disconnect power before servicing.

! WARNING



RISK OF EXPLOSION: DO NOT SPRAY FLAMMABLE LIQUIDS.

WARNING: Flammable liquids can create fumes which can ignite, causing property damage or severe injury.

WARNING: Risk of explosion — Do not spray flammable liquids.

6. Do not allow acids, caustic or abrasive fluids to pass through the pump.
7. Never run pump dry or leave spray gun closed longer than 1-2 minutes.
8. Keep operating area clear of all persons.

! WARNING



USE PROTECTIVE EYE WEAR AND CLOTHING WHEN OPERATING THIS EQUIPMENT.

WARNING: High pressure spray can cause paint chips or other particles to become airborne and fly at high speeds. To avoid personal injury, eye, hand and foot safety devices must be worn.

9. Eye, hand, and foot protection must be worn when using this equipment.

SAFETY INFORMATION

! WARNING



TRIGGER GUN KICKS BACK - HOLD WITH BOTH HANDS

WARNING: Grip cleaning wand securely with both hands before starting. Failure to do this could result in injury from a whipping wand.

! WARNING



RISK OF INJURY FROM FALLS WHEN USING LADDER.

WARNING: Be extremely careful when using a ladder, scaffolding or any other relatively unstable location. The cleaning area should have adequate slopes and drainage to reduce the possibility of a fall due to slippery surfaces.

! WARNING



RISK OF INJECTION OR SEVERE INJURY TO PERSONS. KEEP CLEAR OF NOZZLE.

WARNING: High pressure developed by these machines will cause personal injury or equipment damage. Keep clear of nozzle. Use caution when operating. Do not direct discharge stream at people, or severe injury or death will result.



19. Follow the maintenance instructions specified in the manual.

- 10. To reduce the risk of injury, close supervision is necessary when a machine is used near children. Do not allow children to operate the pressure washer. **This machine must be attended during operation.**
- 11. Never make adjustments on machine while in operation.
- 12. Be certain all quick coupler fittings are secured before using pressure washer.

! WARNING




PROTECT FROM FREEZING

WARNING: Protect machine from freezing.

13. To keep machine in best operating conditions, it is important you protect machine from freezing. Failure to protect machine from freezing could cause malfunction of the machine and result in death,

serious bodily injury, and/or property damage. Follow storage instructions specified in this manual.

- 14. Inlet water must be clean fresh water and no hotter than 90°F.
- 15. Manufacturer will not be liable for any changes made to our standard machines or any components not purchased from us.
- 16. The best insurance against an accident is precaution and knowledge of the machine.

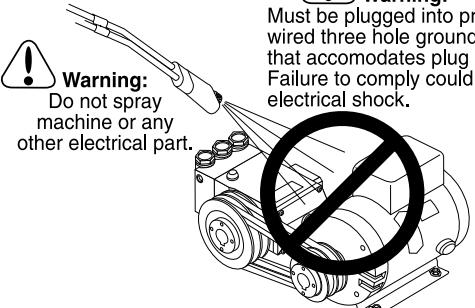

! Warning: Must be plugged into properly wired three hole grounded outlet that accommodates plug on power cord. Failure to comply could result in electrical shock.

! Warning: Do not spray machine or any other electrical part.

OPERATING INSTRUCTIONS

PRE-OPERATION CHECK

- Read machine safety warnings
- Pump oil (SAE 30W (non-detergent oil))
- Cold water supply (1gpm over machines rating • 5/8" • 20 psi)
- Proper power supply and circuit protection
- Hose, wand, nozzles (nozzle sizes per serial plate)
- Water filter (intact, non restrictive)
- Read operation instructions
- This machine must be protected from the elements/ freezing.

SET-UP PROCEDURES

This machine is intended for indoor use. Machine must be stored indoors when not in use.


1. Attach a minimum 5/8" garden hose to inlet connector. Minimum flow should be 1 gpm over the flow rate of the pressure washer.
2. Attach high pressure hose to discharge nipple using quick coupler. Lock coupler securely into place by pulling back coupler collar and inserting it onto discharge nipple, then pushing collar forward to lock in place.
3. Attach wand to spray gun using teflon tape on threads to prevent leakage.
4. Attach connector on discharge hose to spray gun using teflon tape on threads.
5. Remove oil plug on top of pressure washer pump and replace with dipstick supplied. (This may be installed from the factory.)
6. Check oil level on oil dipstick on top of pump. Oil should be visible one half way up sight glass (30W non-detergent).

OPERATING INSTRUCTIONS

1. Read safety and preventative maintenance instructions before starting machine.
2. Turn on water at faucet and pull trigger on spray gun allowing water to flow until all air has discharged from system. Check for water leaks; tighten as needed.
3. Push the pump switch on.
4. Turn the variable pressure control handle clockwise to increase pressure.
5. To apply detergent read "How to Use The Detergent Injector."


SHUT DOWN PROCEDURES

1. Rinse with clean water to remove any soap residue, by placing detergent hose into fresh water bucket and operating injector as described below.
2. Release the trigger on the spray gun. Turn the switch off if the machine is going to be left unattended. (Time delay only).
3. Turn off water supply.
4. Open spray gun to relieve remaining pressure.
5. Remove water supply hose.

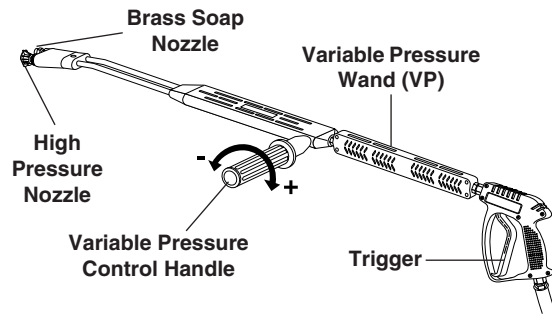


Selection of high or low pressure is accompanied by turning the handle. **Note:** High pressure nozzle must be inserted at end of wand to obtain high pressure. To apply soap read operator's manual.

COMPONENT IDENTIFICATION

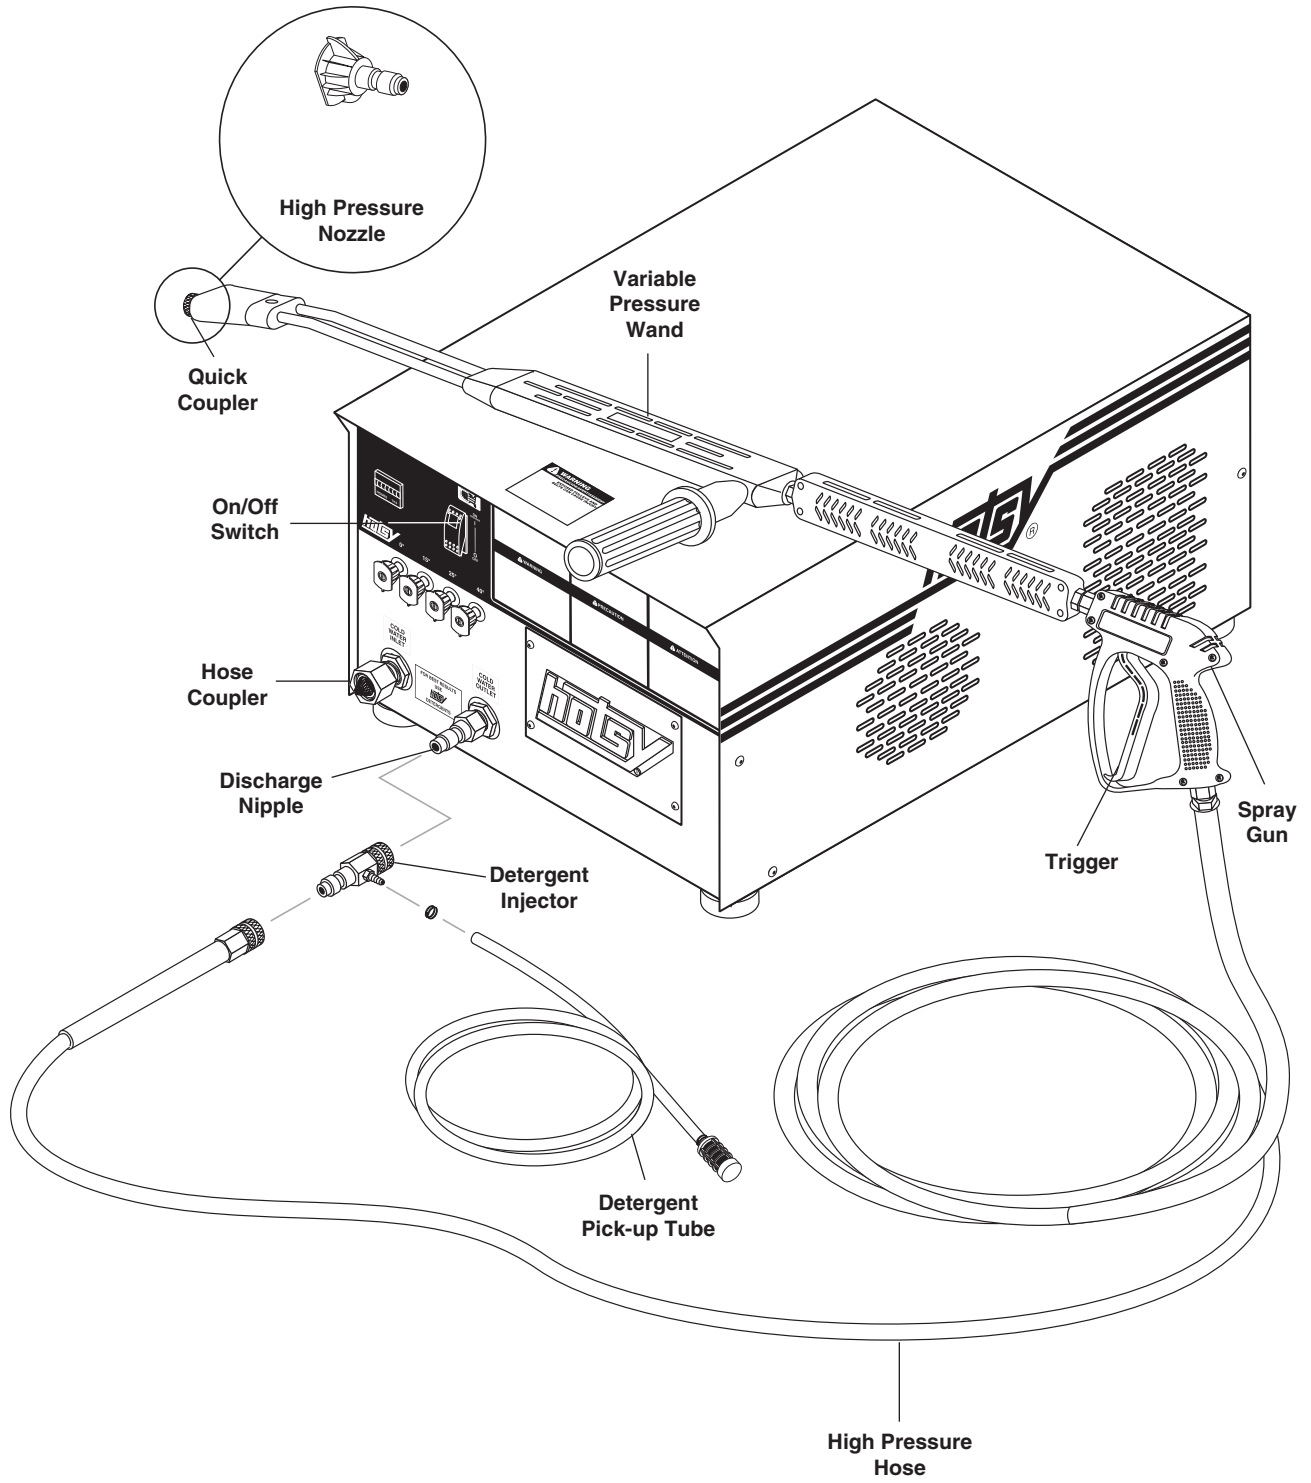

DETERGENT INJECTOR

HOW TO USE THE DETERGENT INJECTOR

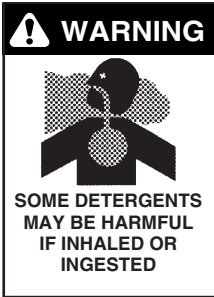


WARNING: *Some detergents may be harmful if inhaled or ingested, causing severe nausea, fainting or poisoning. The harmful elements may cause property damage or severe injury.*

The machine can siphon and mix detergents with the use of the detergent injector kit.

1. Start machine as outlined in Operating Instructions.
2. Place detergent pick-up tube into container of detergent solution.
3. Turn the pressure control handle on the variable pressure wand counterclockwise to low pressure.
4. Open trigger on spray gun. Water detergent ratio is approximately 15 to 1.

NOTE: Soap will not siphon under high pressure.

5. When you finish with the detergents, rinse by simply turning the variable pressure control handle clockwise to high pressure.
6. After use, place siphon strainer into container of clear water and follow steps 3 and 4 to avoid detergent deposit build-up.

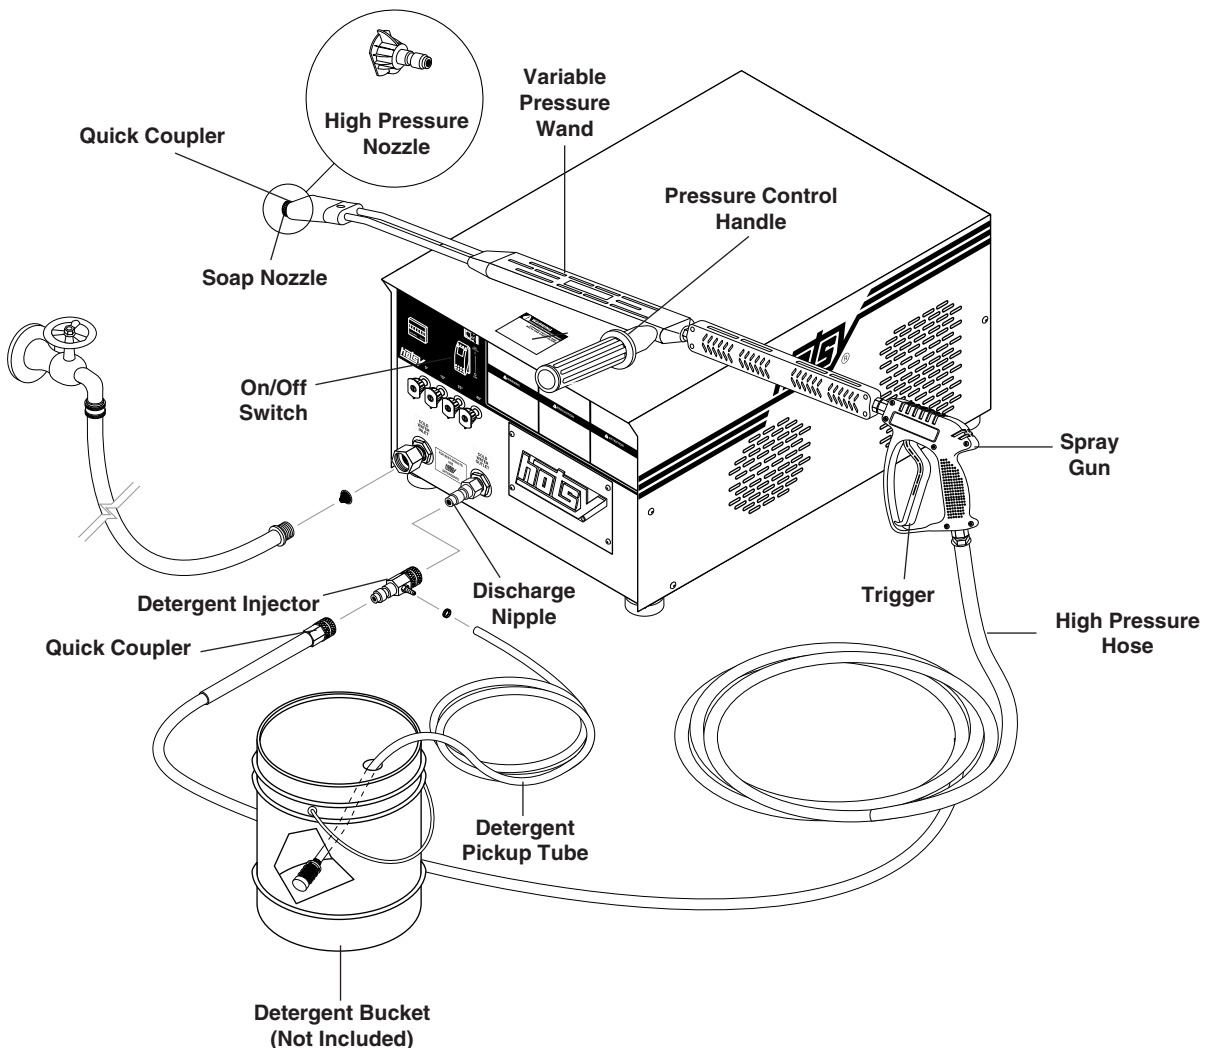

GENERAL WASHING TECHNIQUES AND MAINTENANCE

GENERAL WASHING TECHNIQUES

1. Hold spray nozzle a foot or so from the surface being cleaned. Spray at an angle to get under the material and lift it off.
2. When washing large objects, use detergent injector to apply detergent. Start washing from the bottom and work up. Allow the detergent to set a few minutes. After washing, rinse from the top down.
3. Cleaning heavy dirt or material away with a hard stream of clear water is recommended before using a cleaning agent.

MAINTENANCE

Pump Lubrication

The pump on your 1700 Series pressure washer is a triplex ceramic plunger pump. As the plungers move back, water flows through the inlet valve into the manifold chamber. Then, when the plungers move forward, the inlet valves close and the discharge valves open to produce discharge pressure.

Use only SAE 30 weight (non-detergent oil); change oil after first 50 hours of use. Thereafter, change oil every three months or at 500 hour intervals. Oil level should be checked through the use of the dipstick found on top of the pump, or half way up on the oil gauge window. Oil should be maintained at that level.

Unloader Valves

The unloader valve is connected directly to the discharge port of the pump. Its purpose is to allow recirculation back into the pump inlet when the trigger on the spray gun is closed.

Nozzles

Each machine is equipped with four spray nozzles depending on the flow and pressure of that particular model. Spray nozzles vary in bore size and angle of spray. When ordering replacement nozzles, please specify size and angle of nozzle. Nozzle size for each machine is located on the serial plate.

Winterizing Procedure

Damage due to freezing is not covered by warranty. Use the following cold weather procedures whenever the washer must be stored or operated outdoors under freezing conditions.


During winter months, when the temperature drops below 32°F, protecting your machine against freezing is necessary. A blowout valve is available which can be screwed on in place of the garden hose to blow water out of the system. When compressed air is not available or impractical, siphon a small amount of antifreeze into the machine and siphon a 50/50 mixture of antifreeze into the pump. Run the pump dry for a few seconds and disconnect all hoses to allow water to drain.

Low Pressure Diagnosis

Refer to Troubleshooting Chart for low pressure. If, by referring to the chart, the trouble is found to be either the unloader or the pump, your next step is to determine whether in fact the unloader or the pump is the problem. This can be done by eliminating the unloader from the system and attaching the discharge hose directly to the pump. If high pressure is developed in this manner the pump is good, and the unloader needs to be repaired or replaced.

CAUTION: When using this procedure to test components, keep the spray gun open at all times.

MULTI-ROOM INSTALLATION

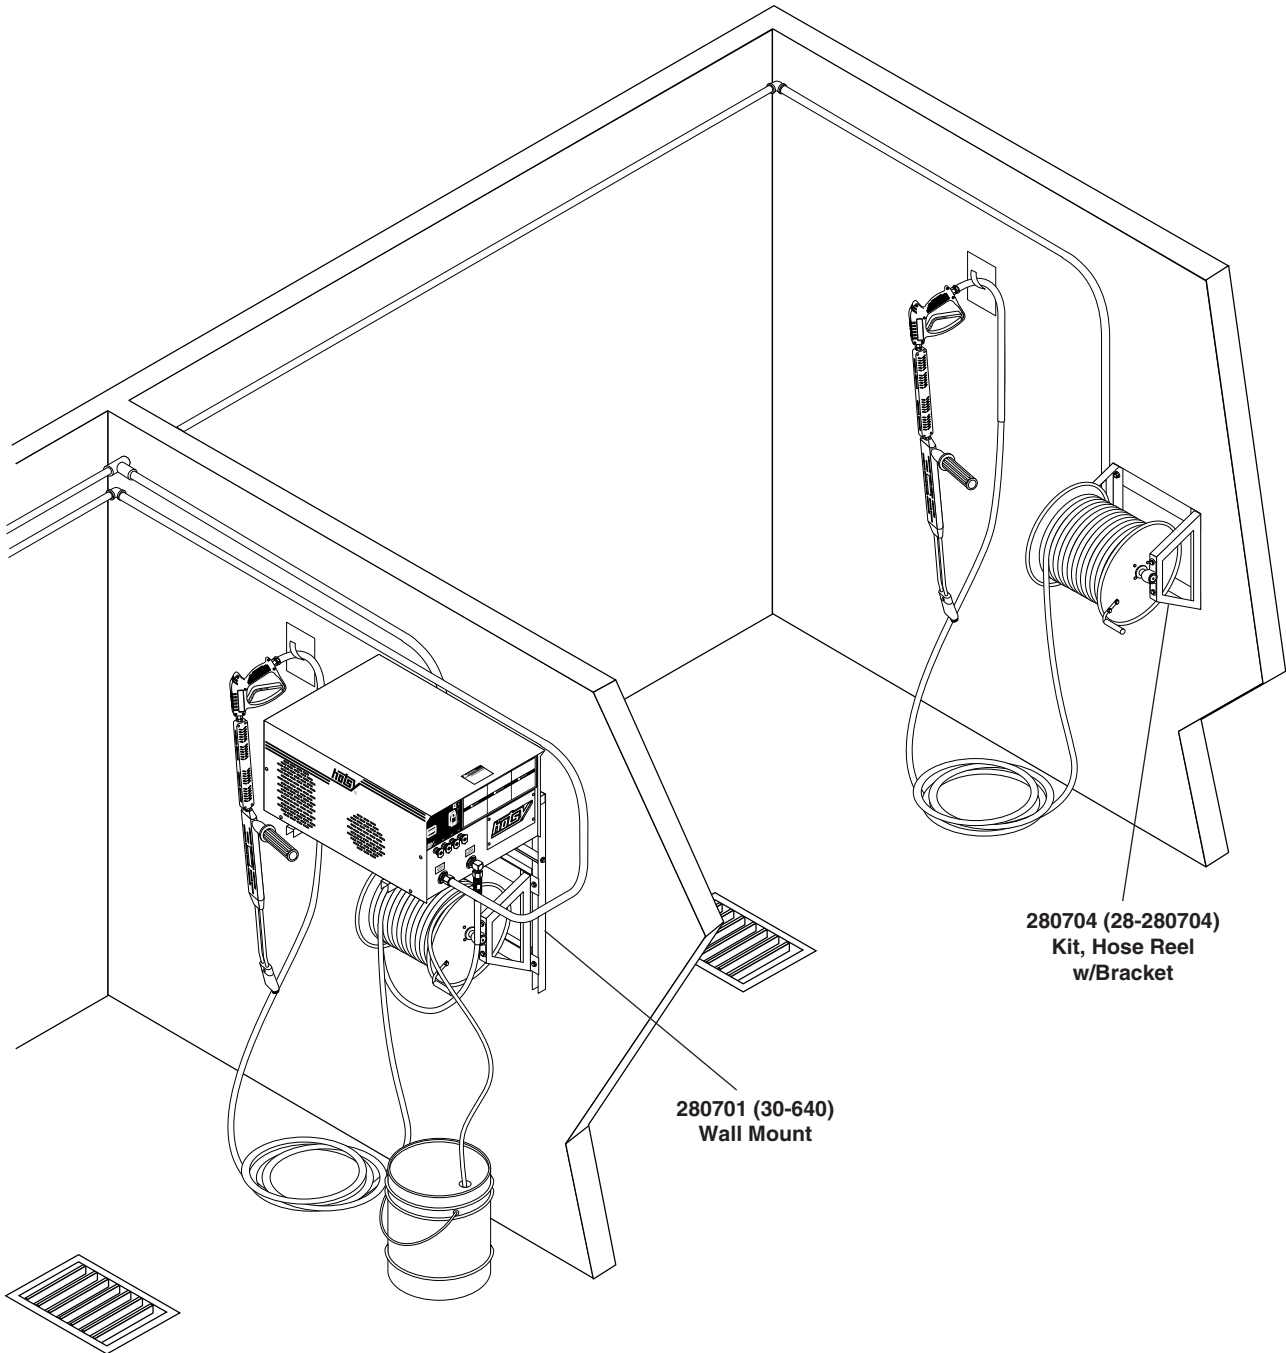

280704 (28-280704)
Kit, Hose Reel
w/Bracket

280701 (30-640)
Wall Mount

TROUBLESHOOTING GUIDE

PROBLEM	POSSIBLE CAUSE	SOLUTION
LOW OPERATING PRESSURE	Faulty pressure gauge	Install new gauge.
	Insufficient water supply	Use larger supply hose; clean filter at water inlet.
	Old, worn or incorrect spray nozzle	Match nozzle number to machine and/or replace with new nozzle.
	Belt slippage	Tighten or replace; use correct belt.
	Plumbing or hose leak	Check plumbing system for leaks. Re-tape leaks with teflon tape.
	Faulty or mis-adjusted unloader valve (Where applicable)	Call local dealer. Tampering with the factory setting may cause personal injury and/ or property damage, and will void the manufacturer's warranty.
	Worn packing in pump	Install new packing kit.
	Fouled or dirty inlet or discharge valves in pump	Clean inlet and discharge valves.
	Worn inlet or discharge valves	Replace with valve kit.
	Obstruction in spray nozzle	Remove obstruction.
	Leaking pressure control valve (where applicable)	Rebuild or replace as needed.
Insufficient power supply	Check voltage.	
FLUCTUATING PRESSURE	Valves worn	Check and replace if necessary.
	Blockage in valve	Check and clean out if necessary.
	Pump sucking air	Check water supply and suction line for air seepage at joints.
	Worn piston packing	Check and replace if necessary.
PRESSURE LOW AFTER PERIOD OF NORMAL USE	Nozzle worn	Check and replace if necessary.
	Inlet or discharge valves worn	Check and replace if necessary.
	Inlet or discharge valves blocked	Check and clean if necessary.
	Unloader valve seat worn	Check and replace if necessary.
PUMP NOISY	Air in suction line	Check water supply and connections on suction line.
	Broken or weak inlet or discharge valve springs	Check and replace if necessary.
	Foreign matter in valves	Check and clean if necessary.
	Worn bearings	Check and replace if necessary.
	Excessive temperature of liquid	Reduce to below 75° C (160°F).
PRESENCE OF WATER IN PUMP OIL	Oil seal worn	Check and replace if necessary.
	High humidity in air	Check and change oil twice as often.
	Piston packing worn	Check and replace if necessary.
MOTOR STRAINS UNDER LOAD (CONTINUED ON NEXT PAGE)	Faulty motor	Send to nearest Baldor repair center.
	Incorrect spray nozzle	Install proper nozzle size (see serial plate for proper size).
	Obstruction in spray nozzle	Remove obstruction.

TROUBLESHOOTING GUIDE

PROBLEM	POSSIBLE CAUSE	SOLUTION
MOTOR STRAINS UNDER LOAD (CONTINUED FROM PREVIOUS PAGE)	Mis-adjusted unloader valve	Call local dealer.
	Pump low or out of oil	Check oil level.
OIL SQUIRTS OUT OF OIL CAP ON PUMP	Pump over filled with oil	Maintain oil level halfway up on the sight glass at rear of pump or at top of notch on dipstick (where applicable).
PUMP RUNNING NORMALLY BUT PRESSURE OUTPUT LOW	Pump sucking air	Check water supply and possibility of air seepage.
	Valves sticking	Check and clean or replace if necessary.
	Unloader valve seat faulty	Check and replace if necessary.
	Nozzle incorrectly sized	Check and replace if necessary (See serial plate for proper size).
	Worn piston packing	Check and replace if necessary.
WATER DRIPPING FROM UNDER PUMP	Piston packing worn	Check and replace if necessary.
	O-Ring plunger retainer worn	Check and replace if necessary.
	Cracked piston	Check and replace if necessary.
OIL DRIPPING	Oil seal worn	Check and replace if necessary.
EXCESSIVE VIBRATION IN DELIVERY LINE	Irregular functioning of the valves	Check and replace if necessary.
SYSTEM WILL NOT START	Motor overload tripped	Check and reset.
	Pressure switch faulty (time delay only)	Check, clean or replace.
	Timer faulty (time delay only)	Check and replace.
MOTOR "HUMS" BUT DOES NOT TURN	Electric motor single phasing	Check for blown fuse or loose power line.
SYSTEM WILL NOT STOP	Pressure switch faulty	Check clean or replace.
	Timer faulty	Check and replace.
SYSTEM STOPS AFTER APPROXIMATELY FOUR (4) SECONDS AND THEN RESTARTS	Faulty pressure switch	Check and replace.
	Leak at discharge line	Check for leak at hose and spray gun.
MACHINE WILL NOT START WHEN SPRAY GUN TRIGGER IS PULLED	Loss of electrical power	Check circuit breaker.
	Faulty on/off switch, pressure switch, timer or magnetic contactor	Test and replace as needed.
MACHINE DOES NOT TURN OFF AFTER FOUR (4) SECONDS WHEN SPRAY GUN IS RELEASED	Test power control switch and solid state timer faulty	Replace the defective component.

PREVENTATIVE MAINTENANCE

IMPORTANT

If the pressure washer demonstrates other symptoms or the corrective actions listed do not correct the problem, contact the local authorized Hotsy Service Center. The Hotsy Service Center can be identified by visiting www.hotsy.com.

PREVENTATIVE MAINTENANCE

This pressure washer was produced with the best available materials and quality craftsmanship. However, you as the owner, have certain responsibilities for the correct care of the equipment. Attention to regular preventative maintenance procedures will assist in preserving the performance of your equipment. Contact your Hotsy dealer for maintenance. Regular preventative maintenance will add many hours to the life of your pressure washer. Perform maintenance more often under severe conditions.

MAINTENANCE SCHEDULE		
Pump Oil	Inspect	25 Hours or Weekly
	Change	Yearly
Check Valve Clearance		Yearly
Water Filter	Inspect	Every 6 Hours or Daily
	Clean	Yearly

OIL CHANGE RECORD

Check pump oil level before first use. Change pump oil after first 50 hours and every month or 500 hours thereafter. Use SAE 30 weight oil.

Date Oil Changed Month/Day/Year	Estimated Operating Hours Since Last Oil Change

Date Oil Changed Month/Day/Year	Estimated Operating Hours Since Last Oil Change



**HOTSY LIMITED NEW PRODUCT WARRANTY
PRESSURE WASHERS
WHAT THIS WARRANTY COVERS**

All Hotsy pressure washers are warranted by Hotsy to the original purchaser to be free from defects in materials and workmanship under normal use, for the periods specified below. This Limited Warranty is subject to the exclusions shown below, is calculated from the date of the original purchase, and applies to the original components only. Any parts replaced under this warranty will assume the remainder of the part's warranty period.

SEVEN YEAR PARTS AND ONE YEAR LABOR WARRANTY:

Components manufactured by Hotsy, such as frames, handles, top and bottom wraps, float tanks, fuel tanks, belt guards, and internal components on the oil-end of HOTSYS manufactured pumps. General, AR, Liberty, Comet and swash and wobble plate pumps have a one year warranty. Heating coils have a five year warranty from date of original machine purchase.

ONE YEAR PARTS AND ONE YEAR LABOR WARRANTY:

All other components, excluding normal wear items as described below, will be warranted for one year on parts and labor. Parts and labor warranty on these parts will be for one year regardless of the duration of the original component manufacturer's part warranty.

WARRANTY PROVIDED BY OTHER MANUFACTURERS:

Motors, generators, and engines, which are warranted by their respective manufacturers, are serviced through these manufacturers' local authorized service centers. Hotsy is not authorized and has no responsibility to provide warranty service for such components.

WHAT THIS WARRANTY DOES NOT COVER

This warranty does not cover the following items:

1. Normal wear items, such as nozzles, spray guns, discharge hoses, wands, quick couplers, seals, filters, gaskets, O-rings, packings, pistons, pump valve assemblies, strainers, belts, brushes, rupture disks, fuses, pump protectors.
2. Damage or malfunctions resulting from accidents, abuse, modifications, alterations, incorrect installation, improper servicing, failure to follow manufacturer's maintenance instructions, or use of the equipment beyond its stated usage specifications as contained in the operator's manual.
3. Damage due to freezing, chemical deterioration, scale build up, rust, corrosion, or thermal expansion.
4. Damage to components from fluctuations in electrical or water supply.
5. Normal maintenance service, including adjustments, fuel system cleaning, and clearing of obstructions.
6. Transportation to service center, field labor charges, or freight damage.

WHAT YOU MUST DO TO OBTAIN WARRANTY SERVICE

In order to obtain warranty service on items warranted by Hotsy, you must return the product to your Authorized Hotsy Distributor, freight prepaid, with proof of purchase, within the applicable warranty period. If the product is permanently installed, you must notify your Authorized Hotsy Distributor of the defect. Your Authorized Hotsy Distributor will file a claim with Hotsy, who must subsequently verify the defect. In most cases, the part must be returned to Hotsy freight prepaid with the claim. For warranty service on components warranted by other manufacturer's, your Authorized Hotsy Distributor can help you obtain warranty service through these manufacturers' local authorized service centers.

LIMITATION OF LIABILITY

Hotsy's liability for special, incidental, or consequential damages is expressly disclaimed. In no event shall Hotsy's liability exceed the purchase price of the product in question. Hotsy makes every effort to ensure that all illustrations and specifications are correct, however, these do not imply a warranty that the product is merchantable or fit for a particular purpose, or that the product will actually conform to the illustrations and specifications. Our obligation under this warranty is expressly limited at our option to the replacement or repair at a service facility or factory designated by us, of such part or parts as inspection shall disclose to have been defective. **THE WARRANTY CONTAINED HEREIN IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ARE EXPRESSLY LIMITED TO THE DURATION OF THIS WRITTEN WARRANTY.** Hotsy does not authorize any other party, including authorized Hotsy Distributors, to make any representation or promise on behalf of Hotsy, or to modify the terms, conditions, or limitations in any way. It is the buyer's responsibility to ensure that the installation and use of Hotsy products conforms to local codes. While Hotsy attempts to assure that its products meet national codes, it cannot be responsible for how the customer chooses to use or install the product. Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

HOTSY

www.hotsy.com

If you are looking for replacement parts for your Hotsy, please contact your local dealer. You can find a dealer by calling Hotsy at 800-525-1976 or by visiting www.hotsy.com.

If you need service on your pressure washer, contact your local Hotsy dealer or visit www.Hotsy.com. Smart phone users scan the code below to link directly to the Service Request page.

